

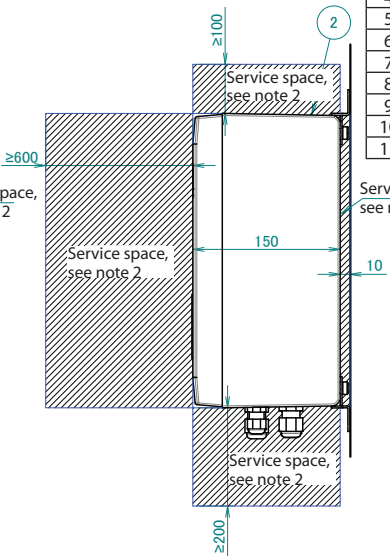
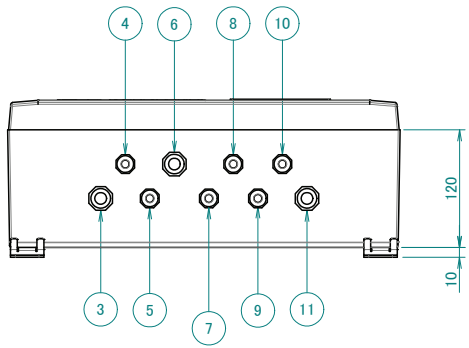


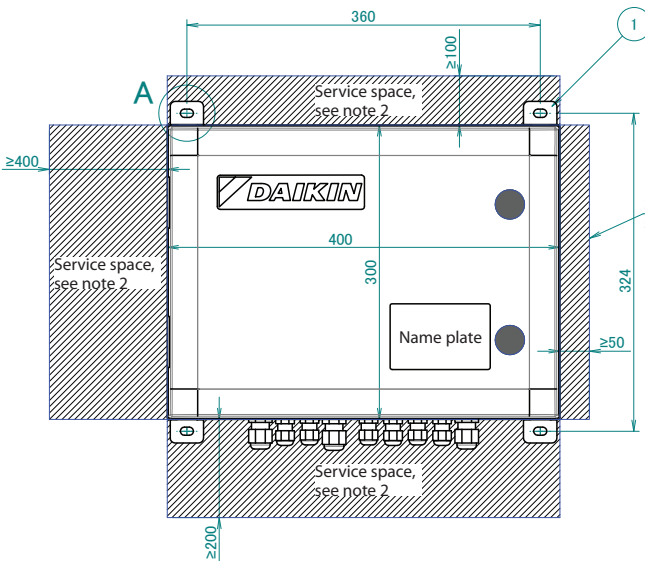

Item	Part name	Specifications
1	4 Mounting legs	
2	Control box	
3	Cable gland M20	Power supply cable
4	Cable gland M16	K3/K4,K9/K10 (relay) cable
5	Cable gland M16	K1/K2,K5/K6,K7/K8 (relay) cable
6	Cable gland M20	Electronic expansion valve cable
7	Cable gland M16	Master/slave cable
8	Cable gland M16	C1/C2 CABLE + T1/T2 CABLE
9	Cable gland M16	F1/P2 cable
10	Cable gland M16	P1/P2 cable
11	Cable gland M20	Thermistor cable (R1T,R2T,R3T,R4T)

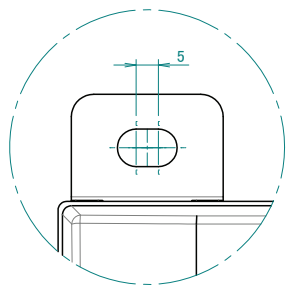

Detail A

- NOTES**
1. Installation:

Make sure that the control box is installed horizontal, cable glands positioned downwards.
The control box can be installed inside or outside.
Do not install the control box in or on the outdoor unit.
Do not put the control box in direct sunlight. Direct sunlight will increase the temperature inside the box and may reduce its lifetime and influence its operation.
Choose a flat and strong mounting surface.
Operation temperature of the control box is between -20°C and 52°C.

2. Service space:

Keep the space free for future maintenance.

3. Cable openings that are not used should be closed with stoppers (Delivered as accessory).