

Additional information:

comfort function mode	Use this mode for a fixed temperature on comfort level. (comfort setpoint default on 21°C in heating mode, 24°C in cooling mode)
reduced function mode	Use this mode for a fixed temperature on reduced level. (reduced setpoint default on 17°C in heating mode, 28°C in cooling mode)
scheduled function mode	Use this mode to let your installation be controlled by the schedule timer. The actions programmed in the schedule timer will be executed automatically according to the actual time. This function uses the scheduled temperature setpoint.
holiday function mode	Use this mode to set a fixed temperature during a long absence.
off function	Use this mode to switch of your installation. Integrated frost protection remains activated. (frost protection default on 4°C in heating mode)
setpoint limitation	Use this function to limit the setpoint range for the end customer.
floor temperature protection	Use this function to set a maximum and a minimum floor temperature.

4TW57991-2