



Warning

Selecting a flow outside the operating area can damage the unit or cause the unit to malfunction.
Also see the minimum and maximum allowed water flow rate on the "Technical specifications" datasheet.

- 1 - Size: -016 - 021 - 025-
- 2 - Size: -032-
- 3 - Size: -040 - 050-
- 4 - Size: -064-