



Warning

Selecting a flow outside the operating area can damage the unit or cause the unit to malfunction.

Also see the minimum and maximum allowed water flow rate on the "Technical specifications" datasheet.

- 1 - Size: ·016 - 021 - 025·
- 2 - Size: ·032·
- 3 - Size: ·040 - 050·
- 4 - Size: ·064·