


Ventilation resistance in chamber (See note 5)

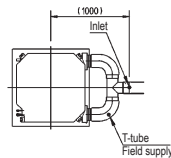

| Item | Name                       | Remark |
|------|----------------------------|--------|
| 1    | Indoor unit                | -      |
| 2    | Decoration panel           | -      |
| 3    | Suction chamber            | -      |
| 4    | Connecting chamber (right) | -      |
| 5    | Connecting chamber (left)  | -      |

## NOTES

- When installing this kit, inspection hatch is necessary. (It is necessary for servicing)  
Either one of inspection hatches must be installed.
- The corner air outlet of this part must be shut.
- In case of mounting a duct fan, make sure to use a wiring adapter for electrical appendices and link with the indoor unit fan.
- The intake air flow rate is recommended to be 20% or less of the H speed air flow rate. If the intake air flow rate is too large, the operating sound may rise or detection of the indoor unit suction temperature may be affected.
- This indicates the distance between the T-tube inlet and the indoor unit inlet, when the T-tube is connected.