

**FWP-AT****Cross reference table**

<b>Description</b>		<b>Additional heat exchanger</b>	<b>3-way valve add. h/e</b>	<b>2-way valve add. h/e</b>	<b>Fcu controller - Advanced plus version</b>	<b>Temperature sensor kit</b>	<b>Relative humidity sensor kit</b>	<b>Fcu relative humidity sensor kit</b>
		EAH..A6	E2MV3..A6	E2MV2..A6	FWEC3A	FWTSKA	FWHska	FWFCKA
Additional heat exchanger	EAH..A6		X	X	X	X	X	X
3-way valve add. h/e	E2MV3..A6	X			X	X	X	X
2-way valve add. h/e	E2MV2..A6	X			X	X	X	X
Fcu controller - Advanced plus version	FWEC3A	X	X	X		X	X	X
Temperature sensor kit	FWTSKA	X	X	X	X		X	X
Relative humidity sensor kit	FWHska	X	X	X	X	X		X
Wall mounting kit for controller	FWFCKA	X	X	X	X	X	X	