

| FWW - FWL - FWM | | | | | | | | | | | | Notes/remarks | |
|-----------------|-----------|-----------|-----------|-----------|-----------|-----------|-----|-----|-----|--|--|---------------|--|
| F2 | F4 | F6 | F8 | F9 | F10 | F11 | FWW | FWL | FWM | | | | |
| 1 | 2 | 3 | 4 | 6 | 8 | 10 | | | | | | | |
| ESRH.A6 | ESRH02A6 | ESRH03A6 | ESRH06A6 | ESRH06A6 | ESRH10A6 | ESRH10A6 | X | X | X | Cannot be used in combination with electric heater | | | |
| EEH.A6 | EEH02A6 | EEH03A6 | EEH06A6 | EEH06A6 | EEH10A6 | EEH10A6 | X | X | X | Cannot be used in combination with additional H/E requires electronic controller | | | |
| E2MV.A6 | E2MV03A6 | | E2MV06A6 | E2MV06A6 | E2MV10A6 | E2MV10A6 | X | X | X | Requires electronic controller or electromechanical controller | | | |
| E4MV.A6 | E4MV03A6 | | E4MV06A6 | E4MV06A6 | E4MV10A6 | E4MV10A6 | X | X | X | Requires electronic controller | | | |
| YFSTA6 | YFSTA6 | | | | | | X | X | X | | | | |
| EADF.A6 | EADF02A6 | EADF03A6 | EADF06A6 | EADF06A6 | EADF10A6 | EADF10A6 | | | X | | | | |
| ESFV.A6 | | ESFV06A6 | | | ESFV10A6 | ESFV10A6 | X | | X | Covers can not be used for FWM | | | |
| ESFV.G.A6 | ESFVG02A6 | ESFVG03A6 | ESFVG06A6 | ESFVG06A6 | ESFVG10A6 | ESFVG10A6 | X | | | | | | |
| EFA.A6 | EFA02A6 | EFA3A6 | EFA6A6 | EFA6A6 | EFA10A6 | EFA10A6 | X | | | | | | |
| ERP.V.A6 | ERPVA6 | ERP03A6 | ERP06A6 | ERP06A6 | ERP10A6 | ERP10A6 | X | X | | Only for vertical mounted units | | | |
| ECFVMB6 | ECFVMB6 | | | | | | X | X | X | | | | |
| ECFWEB6 | ECFWEB6 | | | | | | X | X | X | Water probe included | | | |
| ECFER6 | ECFER6 | | | | | | X | X | X | Water probe included | | | |
| EPIMS.A6 | EPIMS.A6 | | | | | | X | X | X | | | | |
| EDPA6 | EDPA6 | | | | | | X | X | X | | | | |
| EDPHA6 | EDPHA6 | | | | | | X | X | X | | | | |