

FWZ-AT
FWR-AT
FWS-AT

Air Temperature (°C DB - °C WB)		30 - 22															
Water Temperature (Entering °C - leaving °C)		6 - 11				7 - 12				8 - 13				9 - 14			
Model		Total cooling cap	Sensible cooling cap	Water flow	Water pressure drop	Total cooling cap	Sensible cooling cap	Water flow	Water pressure drop	Total cooling cap	Sensible cooling cap	Water flow	Water pressure drop	Total cooling cap	Sensible cooling cap	Water flow	Water pressure drop
		KW	KW	l/sec	kPa	KW	KW	l/sec	kPa	KW	KW	l/sec	kPa	KW	KW	l/sec	kPa
FW 02 T	Max	4.42	2.46	0.211	50	4.11	2.34	0.196	44	3.78	2.22	0.180	38	3.43	2.10	0.164	31
	Min	0.87	0.49	0.042	3	0.82	0.47	0.039	3	0.77	0.44	0.037	2	0.72	0.42	0.034	2
FW 03 T	Max	8.05	4.49	0.384	67	7.50	4.28	0.357	59	6.93	4.06	0.330	51	6.33	3.85	0.302	43
	Min	1.24	0.69	0.059	3	1.18	0.66	0.056	2	1.11	0.63	0.053	2	1.03	0.60	0.049	2
FW 06 T	Max	10.30	5.94	0.491	56	9.59	5.67	0.457	49	8.86	5.40	0.423	42	8.11	5.12	0.387	36
	Min	1.69	0.94	0.080	2	1.60	0.90	0.076	2	1.50	0.86	0.072	2	1.40	0.81	0.067	2
FW 08 T	Max	16.11	9.19	0.767	72	15.04	8.76	0.717	63	13.93	8.33	0.664	55	12.77	7.90	0.609	47
	Min	2.55	1.43	0.122	3	2.41	1.36	0.115	3	2.27	1.30	0.108	2	2.12	1.24	0.101	2

Air flow at 0Pa