


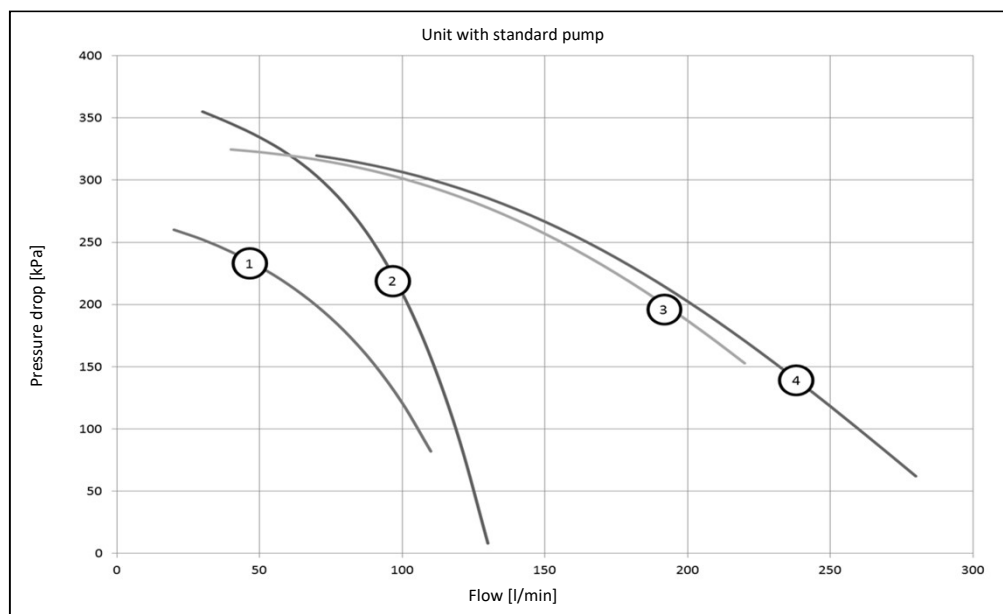

Warning

Selecting a flow outside the operating area can damage the unit or cause the unit to malfunction.
Also see the minimum and maximum allowed water flow rate on the "Technical specifications" datasheet.

- 1 - Size: 20
- 2 - Size: 32
- 3 - Size: 40
- 4 - Size: 64