


SEHVX20BAW
SEHVX32BAW

NOTES to go through before starting the unit

- X1M : Terminal
- X2M : Field wiring terminal for high voltage
- X3M : Field wiring terminal for low voltage
- X4M : Factory wiring terminal for low voltage

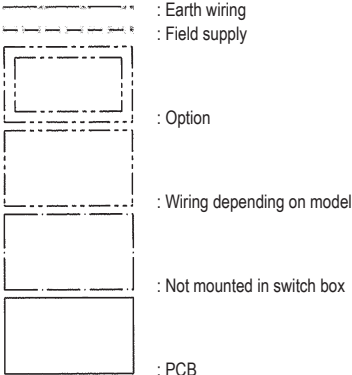

- **/12.2 : Connection ** continues on page 12 column 2
- ① : Several wiring possibilities

- User installed options:
- ☐ EKRUHT* = Remote user interface
 - ☐ 1 x EKR1AHT* = Demand PCB

POSITION IN SWITCH BOX

