


	Screw connection		Brazed connection
	Quick coupling		Flare connection

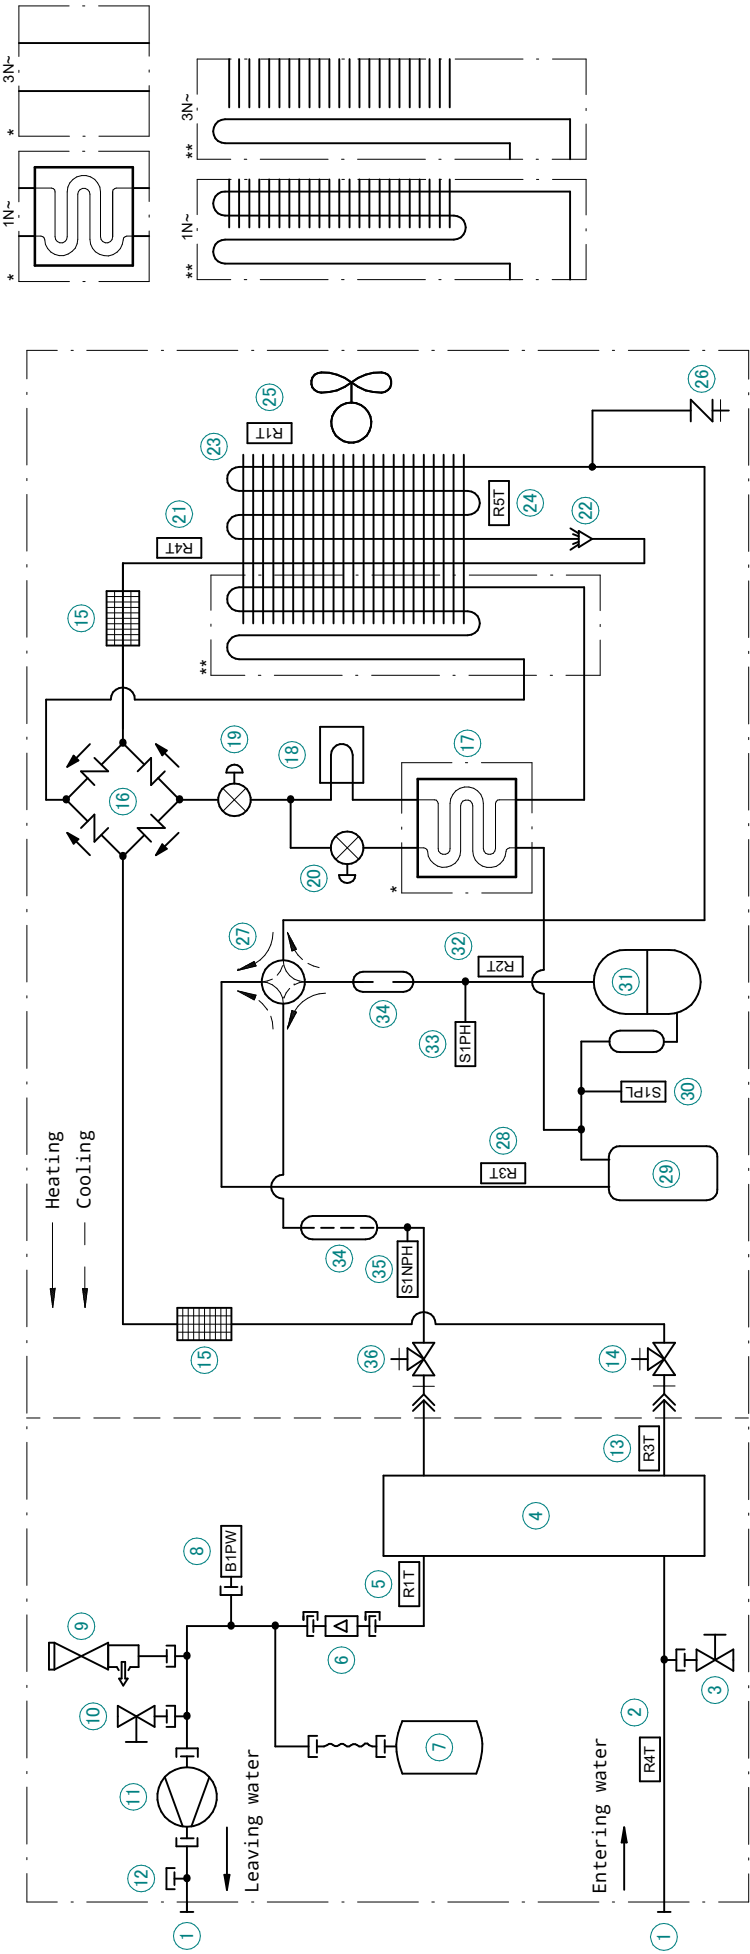

- 1 Screw connection ·1"·
- 2 R4T- Inlet water thermistor
- 3 Drain valve water circuit
- 4 Plate heat exchanger
- 5 R1T- Outlet water heat exchanger thermistor
- 6 Flow sensor
- 7 Expansion vessel
- 8 Space heating water pressure sensor
- 9 Safety valve
- 10 Manual air purge valve
- 11 Pump
- 12 Connection for optional flow switch
- 13 R3T- Refrigerant liquid side thermistor
- 14 Liquid stop valve with service port

- 15 Filter
- 16 Rectifier
- 17 Economiser
- 18 Heat sink
- 19 Electronic expansion valve (main)
- 20 Electronic expansion valve (injection)
- 21 R4T - Thermistor
- 22 Distributor
- 23 Heat exchanger
- 24 R5T - Thermistor (heat exchanger middle)
- 25 R1T - Outdoor air
- 26 Service port ·5/16"· flare
- 27 4-way valve
- 28 R3T - Thermistor (suction)
- 29 Accumulator
- 30 Low pressure switch

- 31 Compressor
- 32 R2T - Thermistor (discharge)
- 33 High pressure switch
- 34 Muffler
- 35 Pressure sensor
- 36 Gas stop valve with service port