

Notes
1. If negative ambient temperatures are expected, both in operation or at standstill, take adequate countermeasures against freezing.

For more information, refer to the installation manual.

Backup heater only operation

No outdoor unit operation

2. In restricted power supply mode, the outdoor unit and backup heater can only operate separately.

Circulation pump operation only