

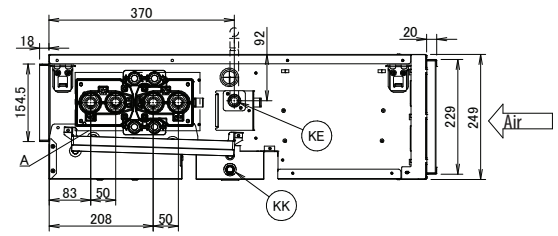
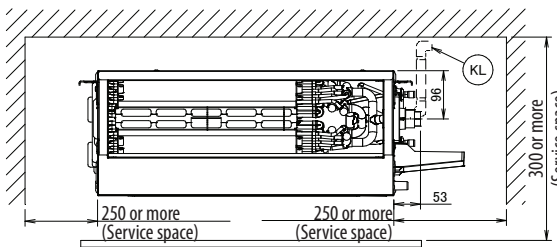
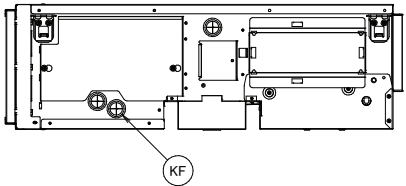



FWQ-A-R

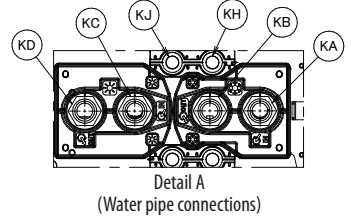

Model	AA	AB	AC	AD
FWQ04A, FWQ05A	550	629	592	469
FWQ07A, FWQ09A	700	779	742	919
FWQ11A, FWQ14A, FWQ17A	1060	1139	1102	1279
FWQ20A, FWQ24A	1480	1559	1522	1699

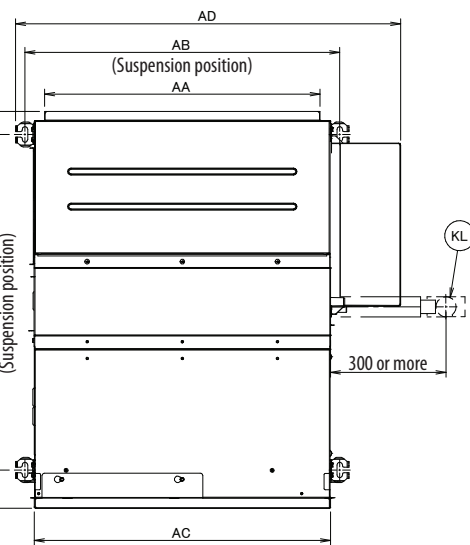

- NOTES**
1. Air filter (KG) is flexible.

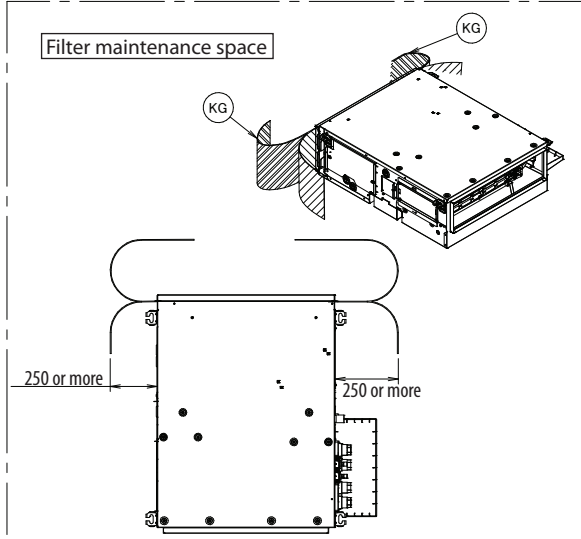

Item	Name	Description	Remark
KA	Water pipe connection cooling in	3/4" BSP female	Water in for 2P/4P (cooling)
KB	Water pipe connection cooling out	3/4" BSP female	Water out for 2P/4P (cooling)
KC	Water pipe connection heating in	3/4" BSP female	Water in for 4P (heating)
KD	Water pipe connection heating out	3/4" BSP female	Water out for 4P (heating)
KE	Drain pipe connection	VP20 (O.D. Ø26)	
KF	Power supply connection		
KG	Air filter		
KH	Air purge		
KJ	Air purge		Only for FWQ-AAF models
KK	Drain pan socket		Only in case of drain pump not used
KL	Drain hose (accessory)	O.D. Ø32 MALE	