 

## EBLA04-08EV3 EDLA04-08EV3



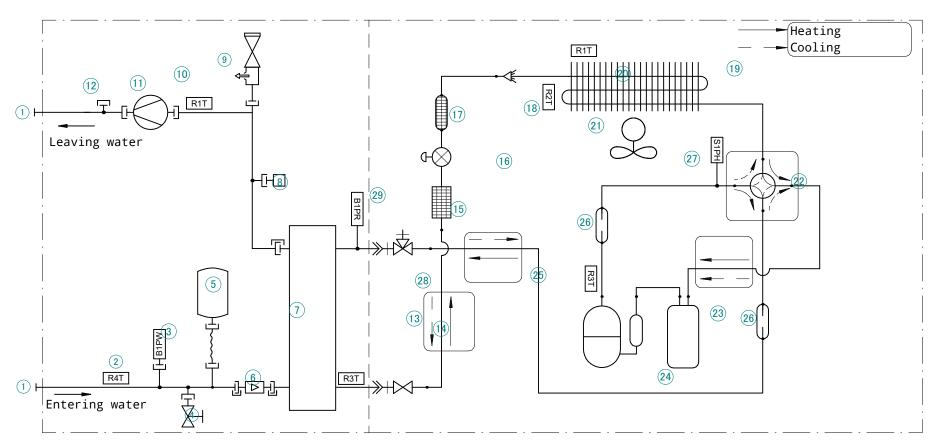

- 1 Screw connection ·1"M·
- R4T-Inlet water thermistor
- 3 Space heating water pressure sensor
- 4 Drain valve water circuit
- (5) Expansion vessel
- 6 Flow sensor
- 7 Plate heat exchanger
- 8 Automatic air purge valve
- 9 Safety valve
- (10) R1T-Outlet water heat exchanger thermistor
- (11) Pump
- (12) Connection for optional flow switch
- R3T-Refrigerant liquid side thermistor
- (14) Liquid stop valve
- (15) Filter

- (16) Electronic expansion valve
- Muffler with filter
- (18) Distributor
- (19) Heat exchanger
- 20 R1T-Thermistor (air)
- (21) R2T-Thermistor (heat exchanger)
- 22) 4-way valve
- 23 Accumulator
- (24) Compressor
- R3T-Thermistor (discharge)
- (26) Muffler
- (27) High pressure switch
- (28) Gas stop valve with service port
- 29) Refrigerant pressure sensor