


NOTES to go through before starting the unit

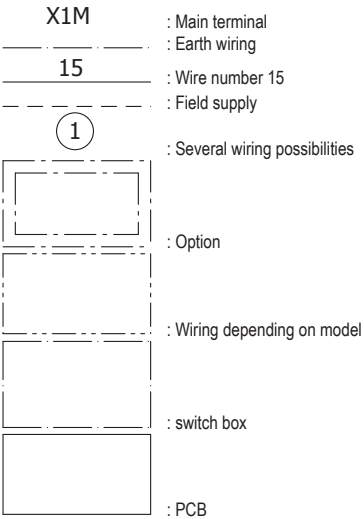

NOTES

1. Refer to the wiring diagram sticker (on the back of the front plate) for how to use the BS1~BS4 and DS1 switches.
2. When operating, do not short-circuit protection device(s) S1PH, S1PL, S1NPH.
3. Refer to the combination table and the option manual for how to connect the wiring to X6A and X77A.


User installed options:

- ☐ Remote user interface
- ☐ Ext. outdoor thermistor
- ☐ Control box
 - Main LWT:
 - ☐ On/OFF thermostat (wired)
 - ☐ On/OFF thermostat (wireless)
 - ☐ Ext. thermistor
 - ☐ Heat pump convector
 - Add LWT:
 - ☐ On/OFF thermostat (wired)
 - ☐ On/OFF thermostat (wireless)
 - ☐ Ext. thermistor
 - ☐ Heat pump convector
- ☐ Option box
 - ☐ External indoor ambient thermistor


POSITION IN SWITCH BOX



OUTDOOR

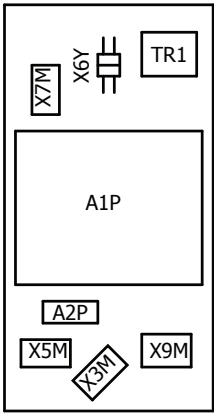


Hydro switch box

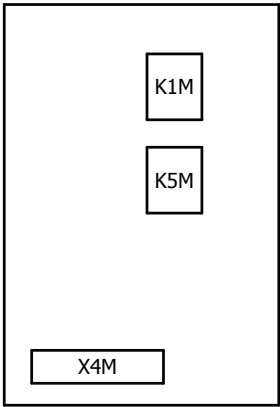


BUH switch box



INDOOR

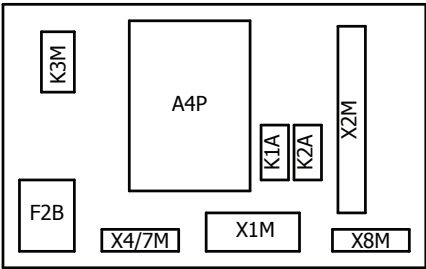

Control box

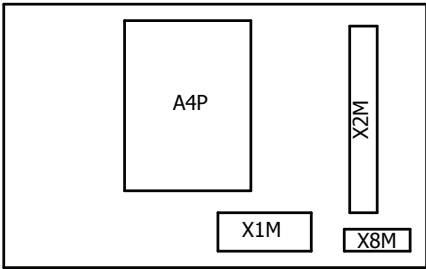

Option box