


NOTES to go through before starting the unit

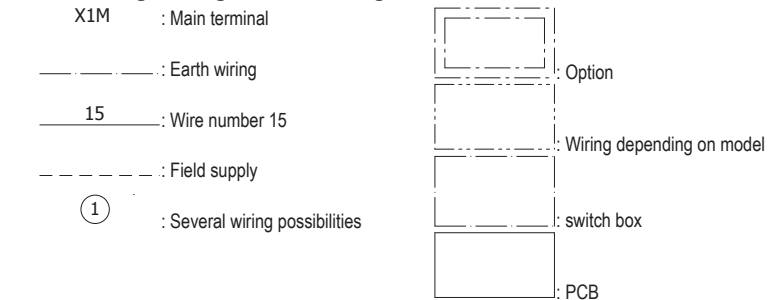




NOTES

1. Refer to the wiring diagram sticker (on the back of the front plate) for how to use the BS1-BS4 and DS1 switches.
2. When operating, do not short-circuit protection device(s) S1PH, S1PL, S1NPH.
3. Refer to the combination table and the option manual for how to connect the wiring to X6A and X77A.

User installed options:

- ☐ Remote user interface
 - ☐ Ext. outdoor thermistor
 - ☐ Control box
 - ☐ BUH option
 - BUH configuration (only for *9W)
 - ☐ 6V3 (1N~, 230V, 6kW)
 - ☐ 6WN (3N~, 400V, 6kW)
 - ☐ 9WN (3N~, 400V, 9kW)
- Main LWT:
 - ☐ ON/OFF thermostat (wired)
 - ☐ ON/OFF thermostat (wireless)
 - ☐ Ext. thermistor
 - ☐ Heat pump convector
- Add LWT:
 - ☐ ON/OFF thermostat (wired)
 - ☐ ON/OFF thermostat (wireless)
 - ☐ Ext. thermistor
 - ☐ Heat pump convector

POSITION IN SWITCH BOX

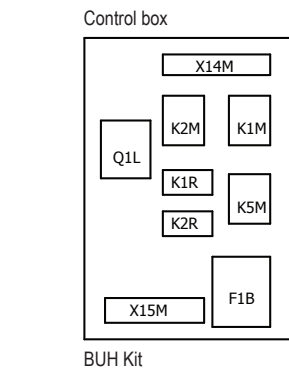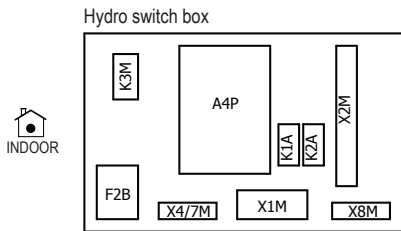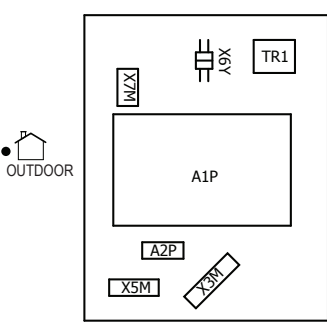

BUH Kit

