


EABH-D6V

EABH-D9W

EABX-D6V

EABX-D9W

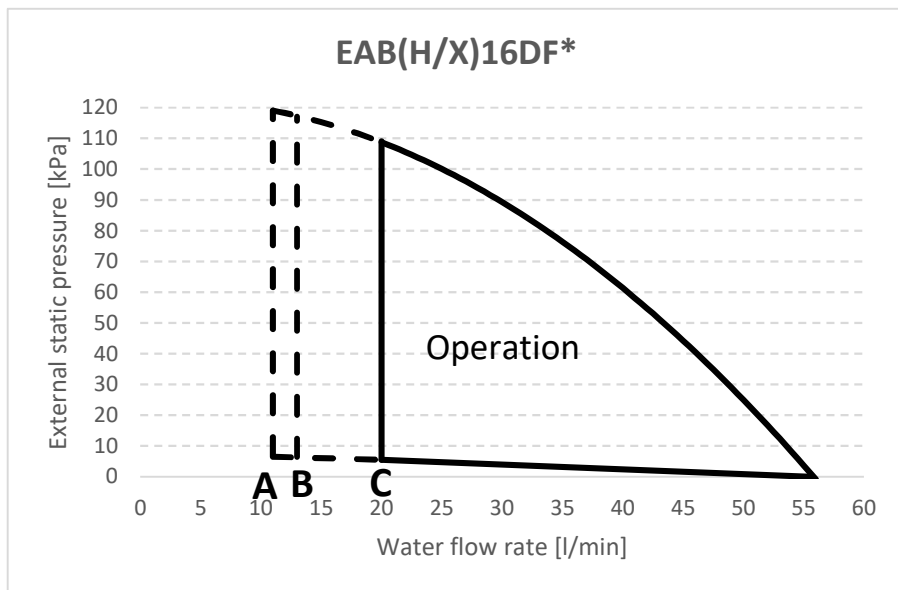

- A Minimum water flow rate during normal operation
- B Minimum water flow rate during backup heater operation
- C Minimum water flow rate during defrost operation

Operation area is extended to lower flow rates only in case the unit operates with heat pump only.

(Not in startup, no BUH operation, no defrost operation.)

See dashed lines

Notes

1. Selecting a flow outside the operating area can damage the unit or cause the unit to malfunction.
See also the minimum and maximum allowed water flow range in the technical specifications.
2. Water quality must be according to EU directive 98/83 EC.