

## NOTES TO GO THROUGH BEFORE STARTING THE UNIT

X4M

: Main terminal

--- 15 ---

: Earth wiring

: Wire number 15

: Field supply

: Several wiring possibilities

①



: Option



: Wiring depending on model



: Switchbox



: PCB

### User installed options:

- Remote user interface
- Ext. outdoor thermostat
- Control box
  - DHW tank
  - BUH option
    - BUH configuration (Only for 9W)
      - 6V3 (1N-, 230V, 6kW)
      - 6WN (3N-, 400V, 6kW)
      - 9WN (3N-, 400V, 9kW)


### Main LWT:

- ON/OFF thermostat (Wired)
- ON/OFF thermostat (Wireless)
  - Ext. Thermostat
- Heat pump convector


### Add LWT:

- ON/OFF thermostat (Wired)
- ON/OFF thermostat (Wireless)
  - Ext. Thermostat
- Heat pump convector
- Option box
  - External indoor ambient thermostat


## POSITION IN SWITCHBOX

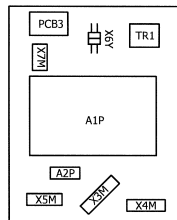


Hydro switch box

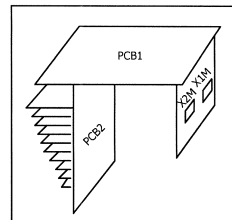


Compressor switchbox

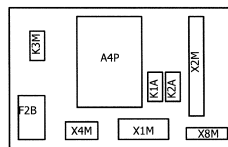

Control box

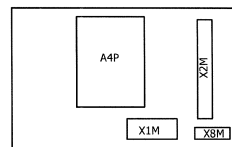

Option box

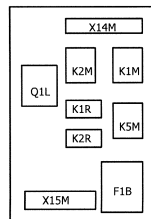

BUH-Kit