 

 


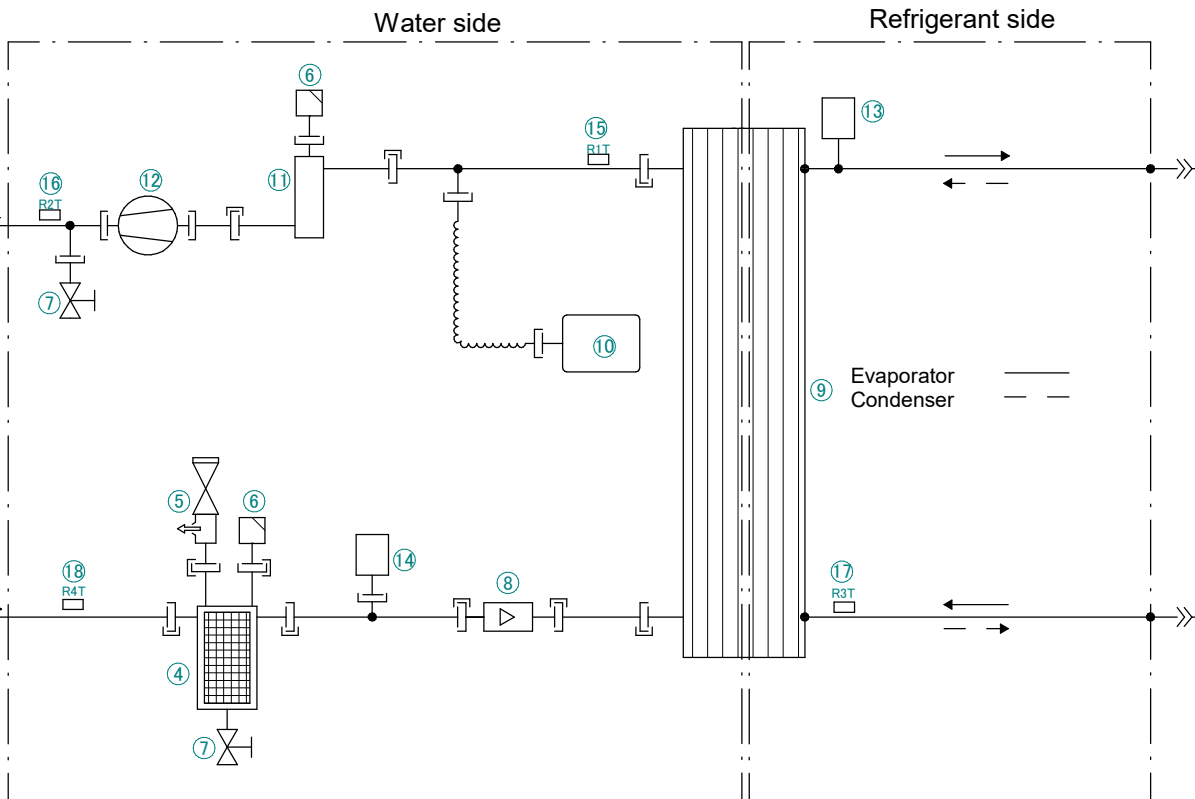


 
**EHBH-D6V**  
**EHBH-D9V**  
**EHBX-D6V**  
**EHBX-D9V**

Field installed



Field installed



 Screw connection	 Brazed connection
 Quick coupling	 Flare connection

- ① Space heating - water OUT
- ② Space heating - water IN
- ③ Shut-off valve
- ④ Magnetic filter / dirt separator
- ⑤ Safety valve
- ⑥ Air purge
- ⑦ Drain valve
- ⑧ Flow sensor
- ⑨ Plate heat exchanger

- ⑩ Expansion vessel
- ⑪ Backup heater
- ⑫ Pump
- ⑬ Refrigerant pressure sensor
- ⑭ Space heating water pressure sensor
- ⑮ R1T - Outlet water heat exchanger thermistor
- ⑯ R2T - Outlet water backup heater thermistor
- ⑰ R3T - Thermistor (heat exchanger, liquid pipe)
- ⑱ R4T - Inlet water thermistor