
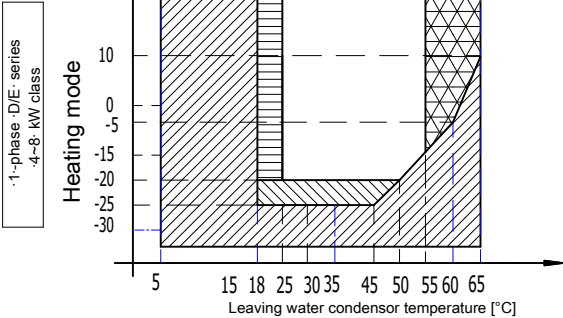


EBBH-E6V / EHBH-E9W / EHBX-E6V / EHBX-E9W
EHSB-E / ESHB-E / EHSX-E / EHSXB-E
EHVH-E6V / EHVH-E9W / EHVX-E3V
EHVX-E6V / EHVX-E6VG / EHVX-E9W / EHVZ-E6V / EHVZ-E9W

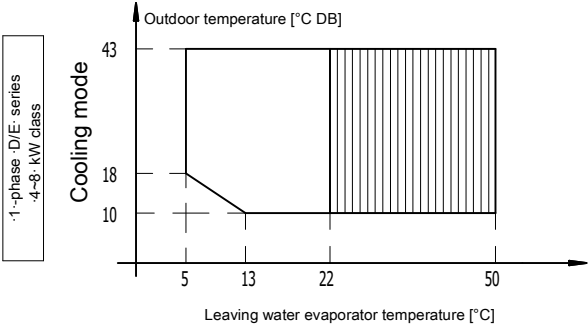

Legend

- Backup heater only operation
No outdoor unit operation
- Outdoor unit operation if setpoint ≥ -25°C
- Operation of outdoor unit possible, but with possible capacity reduction.
If the outdoor temperature < -25°C, the outdoor unit will stop.
Indoor unit and backup heater operation will continue.
- Pull-down area
- Outdoor unit operation if setpoint >55°C and ΔT = -10°C (ΔT = outlet temperature – inlet temperature)

Remark

In restricted power supply mode, the outdoor unit, booster heater and backup heater can only operate separately.

Warning

In areas with low ambient temperatures and high humidity, or in areas with heavy snowfall, remove the suction grille to ensure proper operation.

Non-exhaustive list of areas: Austria, Czech Republic, Denmark, Estonia, Finland, Germany, Hungary, Latvia, Lithuania, Norway, Poland, Romania, Serbia, Slovakia, Sweden, ...

Indoor
D/E(A/F/G/J) series Standard