


## EHB(H/X)(04/08)(D/E)\*

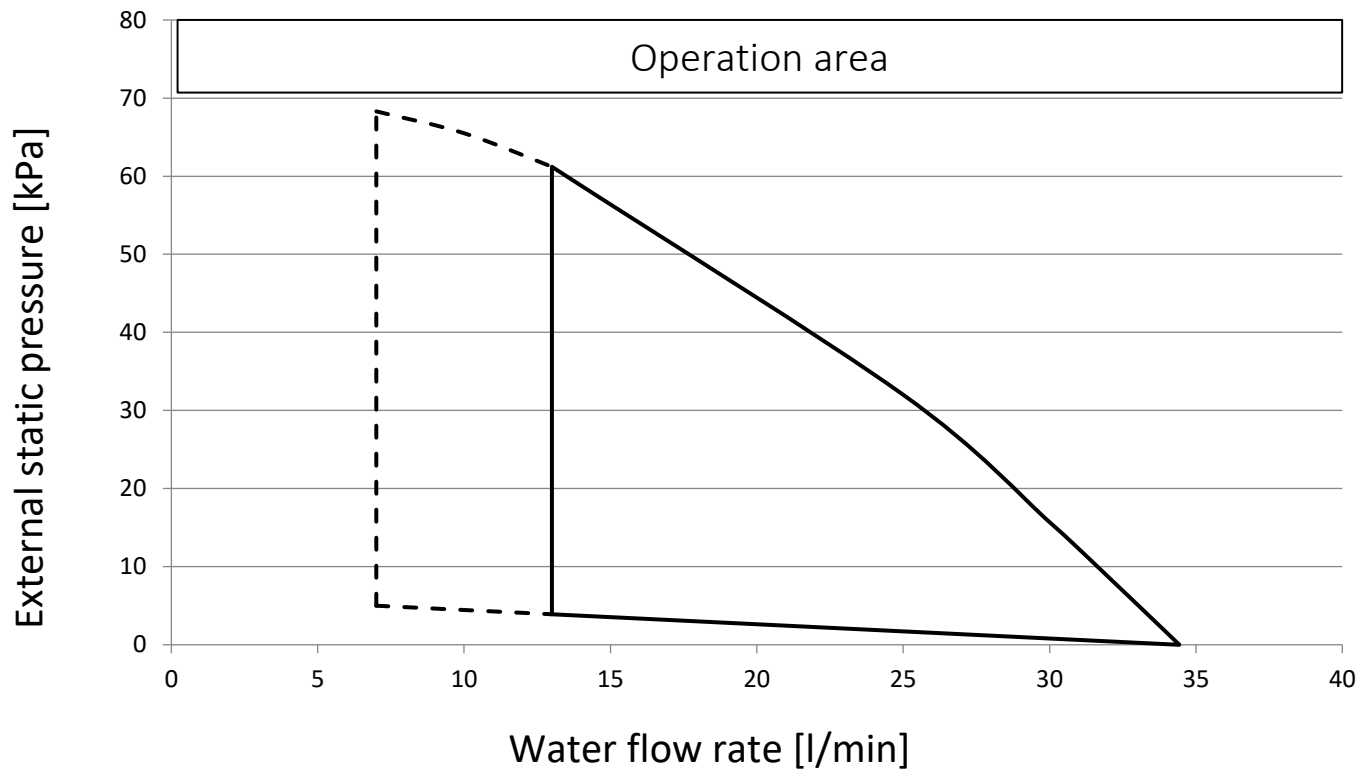

Operation area is extended to lower flow rates only in case the unit operates with heat pump only.

See dashed lines

### Notes

- 1 Selecting a flow outside the operating area can damage the unit or cause the unit to malfunction.  
See also the minimum and maximum allowed water flow range in the technical specifications.

- 2 Water quality must be according to EU directive 98/83 EC.