


EHVH-E6V  
EHVH-E9W  
EHVX-E3V  
EHVX-E6V(G)  
EHVX-E9W

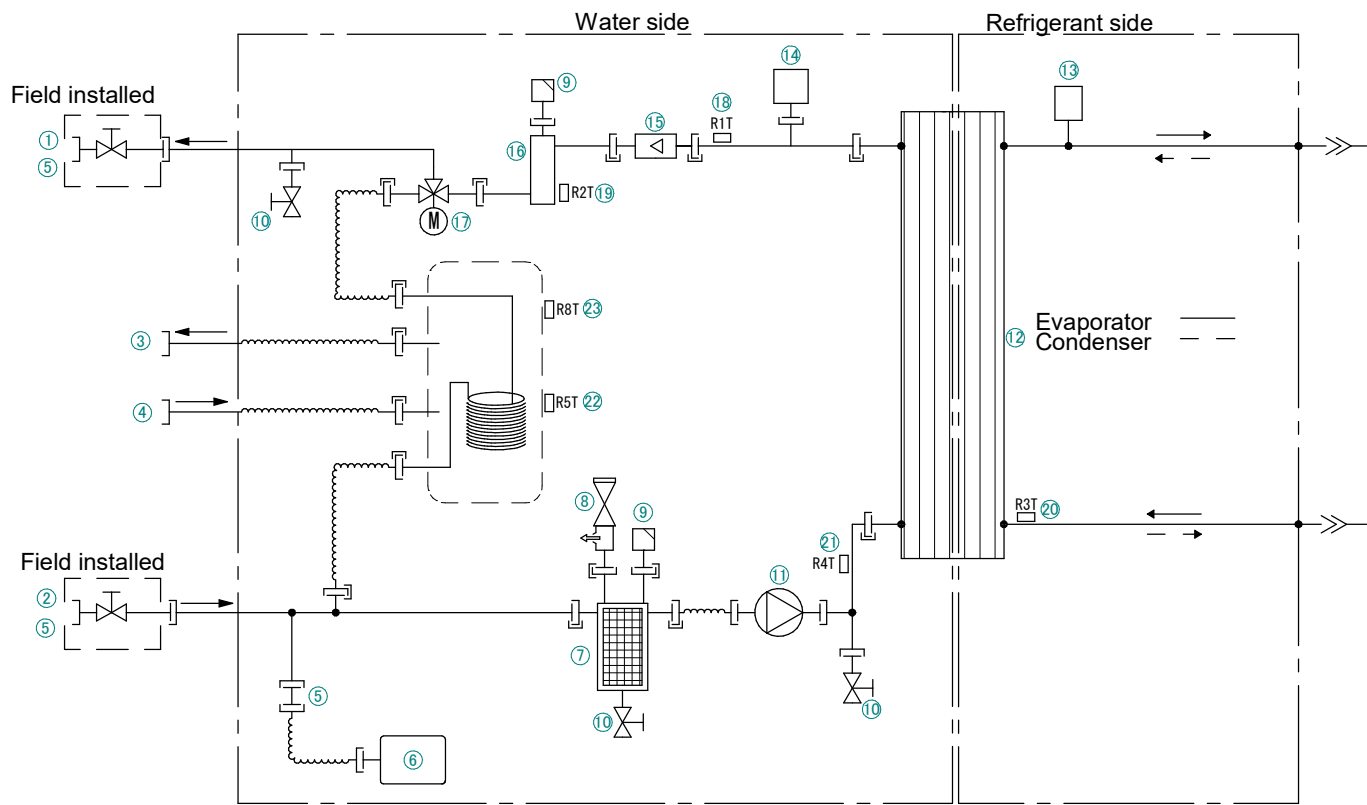

- ① Space heating - water OUT
- ② Space heating - water IN
- ③ Domestic hot water: hot water out
- ④ Domestic hot water: cold water in
- ⑤ Connection
- ⑥ Expansion vessel
- ⑦ Magnetic filter / dirt separator
- ⑧ Safety valve
- ⑨ Air purge
- ⑩ Drain valve
- ⑪ Pump
- ⑫ Plate heat exchanger

- ⑬ Refrigerant pressure sensor
- ⑭ Space heating water pressure sensor
- ⑮ Flow sensor
- ⑯ Backup heater
- ⑰ 3-way valve (space heating/domestic hot water)

- ⑱ R1T - Outlet water heat exchanger thermistor
- ⑲ R2T - Outlet water backup heater thermistor
- ⑳ R3T - Thermistor (heat exchanger, liquid pipe)
- ㉑ R4T - Inlet water thermistor
- ㉒ R5T - Tank thermistor
- ㉓ R8T - Tank thermistor

	Screw connection		Brazed connection
	Quick coupling		Flare connection