

EHVH-CBV

Factory-mounted optional equipment for *HV(H/X)04S#CB##

Description	*HV(H/X)04S#CB##	
	18 - 3V	18 - 3V
Heating only model *HVH*	0	0
Reversible model *HVX*	-	-
Backup heater 3kW 1N~230 V	0	0
Backup heater 6kW 1N~230 V	-	-
Backup heater 6kW 3N~400 V	-	-
Backup heater 6kW 3~230 V	-	-
Backup heater 9kW 3N~400 V	-	-
Domestic hot water tank 180L	0	0
Domestic hot water tank 260L	-	-

Factory-mounted optional equipment for *HV(H/X)(08/11/16)S#CB##

Description	*HV(H/X)(08/11/16)S#CB##			
	18 - 3V	26 - 9W (9)	18 - 3V	26 - 9W (9)
Heating only model *HVH*	0	0	0	0
Reversible model *HVX*	-	-	-	-
Backup heater 3kW 1N~230 V	0	0	0	0
Backup heater 6kW 1N~230 V	-	-	0	0
Backup heater 6kW 3N~400 V	-	-	0	0
Backup heater 6kW 3~230 V	-	-	0	0
Backup heater 9kW 3N~400 V	-	-	0	0
Domestic hot water tank 180L	0	0	-	-
Domestic hot water tank 260L	-	-	0	0

Factory-mounted optional equipment for EHVH(04/08/11/16)SU(18/26)CB6W and EHVH(04/08/11/16)S(18/26)CBV

Description	EHVH(04/08/11/16)SU(18/26)CB6W		EHVH(04/08/11/16)S(18/26)CBV	
	U18 - 6W	U26 - 6W	18 - V	26 - V
Heating only model *HVH*	0	0	-	-
Backup heater 3kW 1N~230 V	0	0	-	-
Backup heater 6kW 1N~230 V	0	0	-	-
Backup heater 6kW 3N~400 V	0	0	-	-
Backup heater 6kW 3~230 V	0	0	-	-
Backup heater 9kW 3N~400 V	-	-	-	-
Domestic hot water tank 180L	0	-	0	-
Domestic hot water tank 260L	-	0	-	0

Outdoor combination table for *HV(H/X)(04/08)S(18/26)CB* and *HV(H/X)(11/16)S(18/26)CB*

		*RLQ004CA*V3*	*RLQ006CA*V3*	*RLQ008CA*V3*	*RHQ011B*(V3/W1)	*RHQ014B*(V3/W1)	*RHQ016B*(V3/W1)	*RLQ011C*(V3/W1)	*RLQ014C*(V3/W1)	*RLQ016C*(V3/W1)
HVH04S(U)18CB	Heating only indoor unit	0	---	---	---	---	---	---	---	---
HVX04S18CB	Reversible indoor unit	0	---	---	---	---	---	---	---	---
HVH08S(U)18/26/CB	Heating only indoor unit	---	0	0	---	---	---	---	---	---
HVX08S(18/26)CB	Reversible indoor unit	---	0	0	---	---	---	---	---	---
HVH11S(U)18/26/CB	Heating only indoor unit	---	---	---	0	---	---	0	---	---
HVX11S(18/26)CB	Reversible indoor unit	---	---	---	0	---	---	0	---	---
HVH16S(U)18/26/CB	Heating only indoor unit	---	---	---	---	0	---	0	0	0
HVX16S(18/26)CB	Reversible indoor unit	---	---	---	---	0	---	0	0	0

Kit availability for outdoor units

		*RLQ004CA*V3*	*RLQ006CA*V3*	*RLQ008CA*V3*	*RHQ011B*(V3/W1)	*RHQ014B*(V3/W1)	*RHQ016B*(V3/W1)	*RLQ011C*(V3/W1)	*RLQ014C*(V3/W1)	*RLQ016C*(V3/W1)
EKDP008CA	Drain pan kit	0	0	0	---	---	---	---	---	---
EKDPH008CA	Drain pan kit	0	0	0	---	---	---	---	---	---
EKFT008CA	Drain pan kit	0	0	0	---	---	---	---	---	---
*KDK04	Drain plug kit	(3)	---	---	0	0	0	---	---	---
*KBPHTH16A	Bottom plate heater	(1) (3) (10)	---	---	0	0	0	---	(8)	---
*R01BSNC	Snow cover	---	---	---	---	---	---	0	0	0
KRP58M51	Demand PCB	---	---	---	---	---	---	0	0	0

Kit availability

Reference	Description		EHV*CB*			
			18 - 3V	18 - 3V	26 - 9W	26 - 9W
	Heating only model *HVH*		0	0	0	0
	Reversible model *HVX*		-	-	-	-
*KRSCA1	Remote sensor for outdoor	(11)	0	0	0	0
KRCS01-1	Remote sensor for indoor	(11)	0	0	0	0
*KRUCBL1...7	User interface language group 1~7		0	0	0	0
*KRUCBS	Simplified user interface	(13)	0	0	0	0
*KRP1HBAA	Digital I/O PCB	(2)	0	0	0	0
*KRP1AHTA	Demand PCB	(6)	0	0	0	0
*KRTWA	Wired room thermostat		0	0	0	0
*KRTR1	Wireless room thermostat	(receiver included)	0	0	0	0
*KRTETS	External temperature sensor option kit	(4)	0	0	0	0
FWXV1SAVEB	Heat pump convector		0	0 (5)	0	0 (5)
FWXV2OAVEB	Heat pump convector		0	0 (5)	0	0 (5)
*KVXKPC	Heat pump convector valve kit	(5)	0	0 (5)	0	0 (5)
*KPCAB2	PC cable kit	(12)	0	0	0	0

Reference	Description	EHVH(04/08/11/16)SU(18/26)CB6W	
	Heating only model EHVH*SU*	18 - 6W	26 - 6W
EKVSU180*	Option kit for the UK 180L	0	-
EKVSU260*	Option kit for the UK 260L	-	0

Reference	Description	EHVH(04/08/11/16)S(18/26)CBV	
	Heating only model EHVH*5*	18 - V	26 - V
EKLBUHC6W1	Backup heater kit	0	0

Notes

- Heater tape that can be fixed on the bottom plate to prevent excessive ice formation.
- PCB that provides additional output connections:
 - Control external heat source (bivalent operation).
 - Output remote ON/OFF signal space heating/cooling OR bottom plate heater *KBPHTH16* control.
 - Remote alarm output
- It is not allowed to combine a bottom plate heater with a drain plug/stop kit.
- *KRTETS can only be used in combination with *KRTR1
- The valve kit is mandatory if a heat pump convector is installed on a reversible model (not mandatory for heating only models).
- PCB to receive up to 4 digital inputs for power limitation, only for *HV(H/X)(04/08)CB.
- The bottom plate heater is factory mounted and controlled by the outdoor unit.
- Unified model, the actual backup heater capacity depends on the actual internal upwiring.
- Requires digital I/O PCB *KRP1HBAA
- Only 1 sensor connectable: indoor or outdoor
- Data cable for connection with PC.
- The simplified user interface (*KRUCBS) can only be used in combination with a main user interface (*KRUCBL1~7).

Remark

Other combinations than mentioned in this combination table are prohibited.