



EHVH04S18CBV
 EHVH08S18CBV
 EHVH08S26CBV

EHV(H/X)04S*CB*

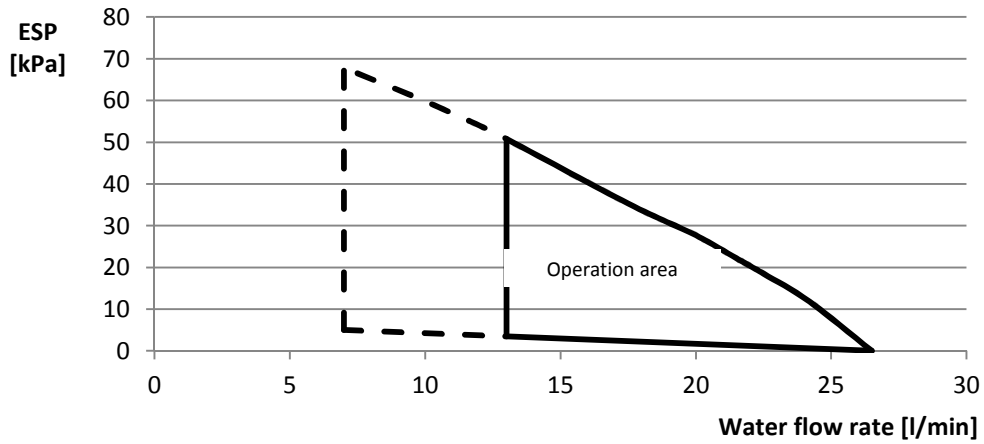

EHV(H/X)08S*CB*

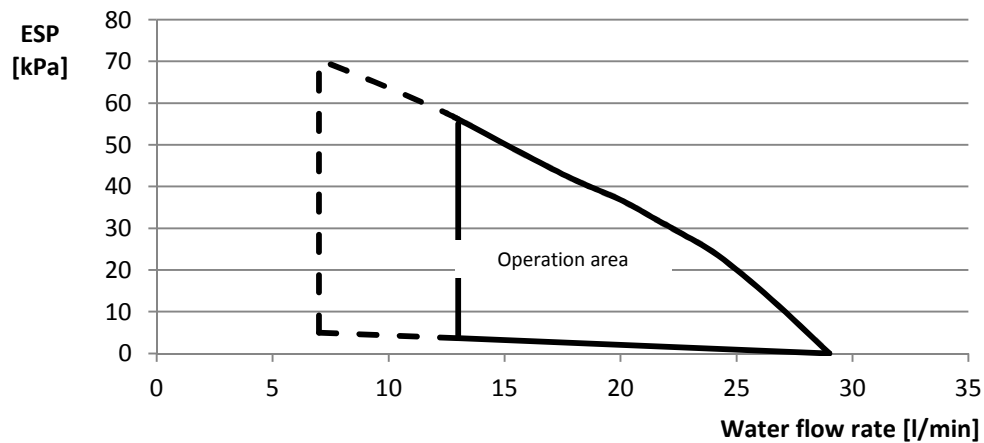

Operation area is extended to lower flow rates only in case the unit operates with heat pump only.
 (Not in startup, no BUH operation, no defrost operation.)
 See dashed lines

ESP = External static pressure [kPa]
 Space heating/cooling circuit
 Flow = Water flow through the unit
 Space heating/cooling circuit

Notes

1. Selecting a flow outside the operating area can damage the unit or cause the unit to malfunction.
 See also the minimum and maximum allowed water flow range in the technical specifications.
2. Water quality must be according to EU directive 98/83 EC.