 
 

 
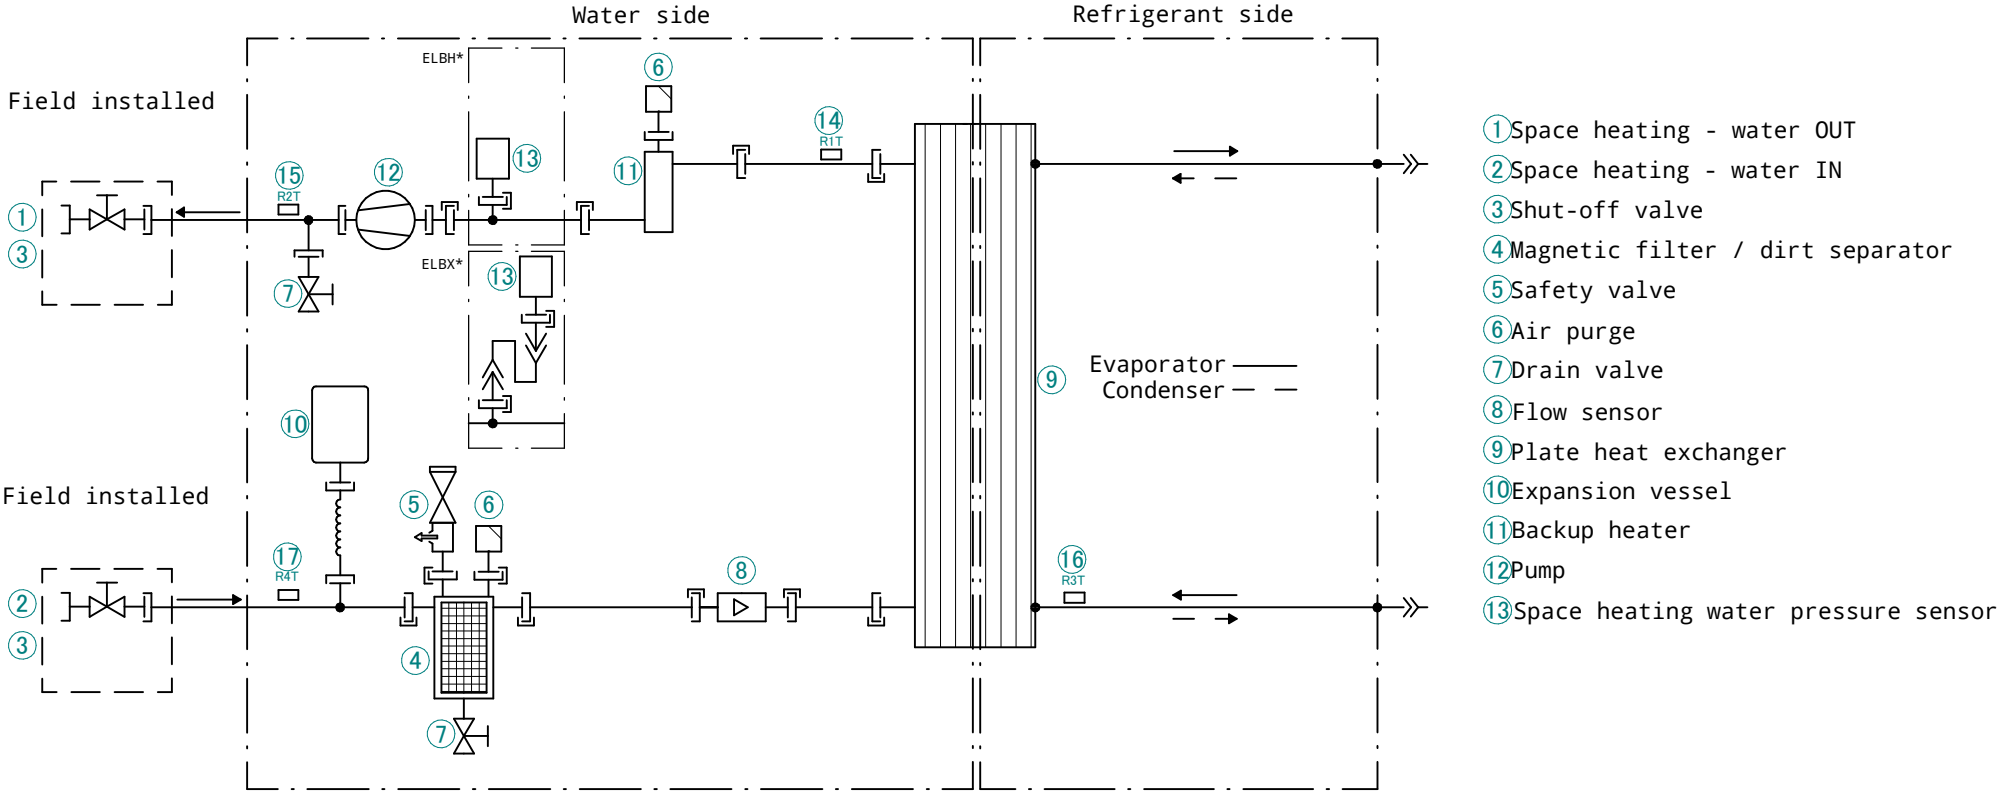


ELBH-E6V  
ELBH-E9W  
ELBX-E6V  
ELBX-E9W

 Screw connection	 Brazed connection
 Quick coupling	 Flare connection



- ⑭ R1T-Outlet water heat exchanger thermistor  
⑮ R2T-Outlet water backup heater thermistor  
⑯ R3T-Thermistor (heat exchanger, liquid pipe)  
⑰ R4T-Inlet water thermistor