


ELVH-E6V
ELVH-E9W
ELVX-E6V
ELVX-E9W

- Screw connection
- Quick coupling
- Brazed connection
- Flare connection

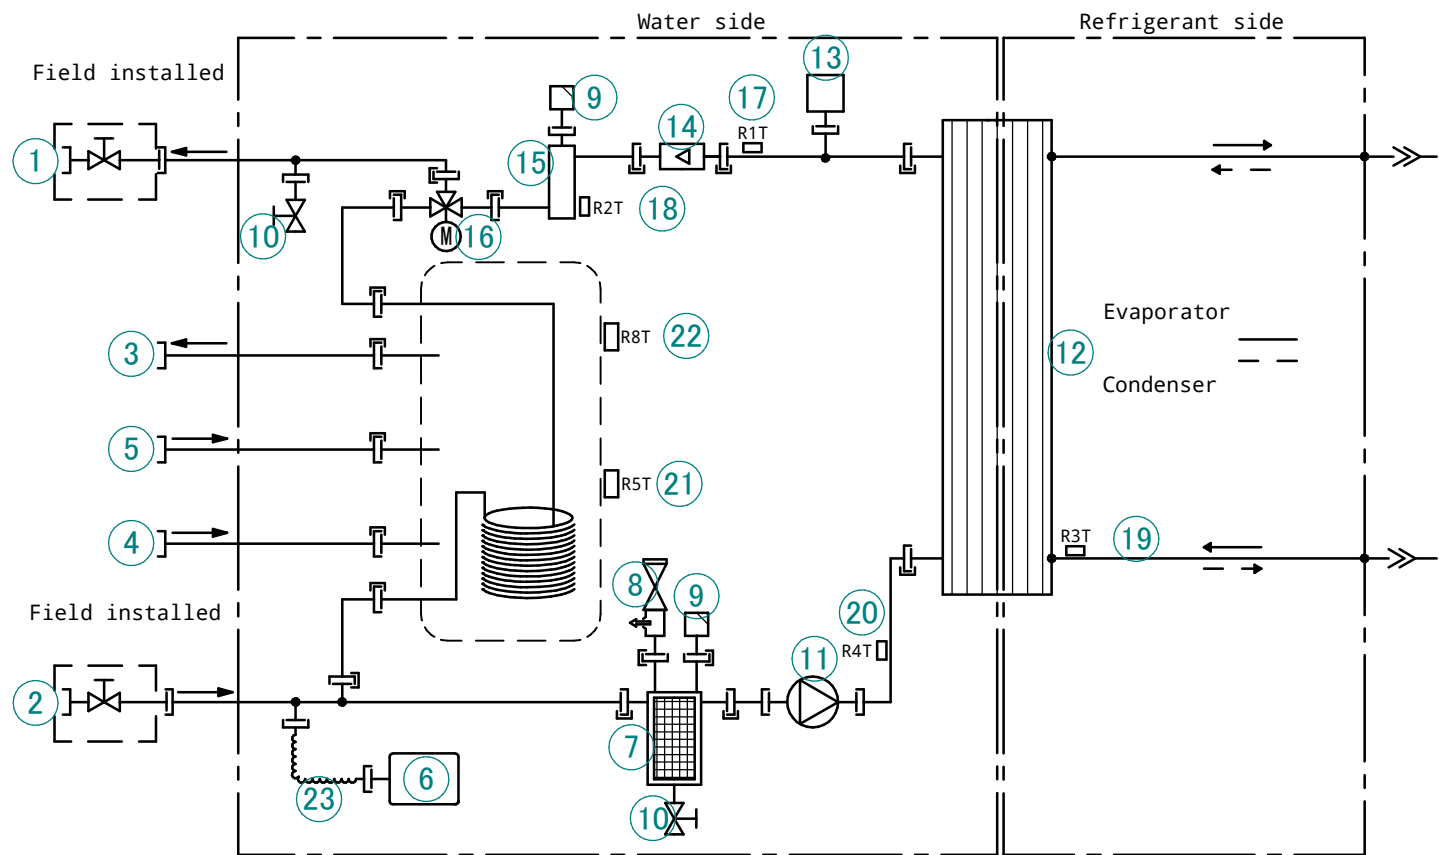

- ① Space heating - water OUT
- ② Space heating - water IN
- ③ Domestic hot water: hot water out
- ④ Domestic hot water: cold water in
- ⑤ Recirculation connection
- ⑥ Expansion vessel
- ⑦ Magnetic filter / dirt separator
- ⑧ Safety valve
- ⑨ Air purge
- ⑩ Drain valve
- ⑪ Pump
- ⑫ Plate heat exchanger
- ⑬ Space heating water pressure sensor
- ⑭ Flow sensor
- ⑮ Backup heater
- ⑯ 3-way valve (space heating/domestic hot water)
- ⑰ R1T -Outlet water heat exchanger thermistor
- ⑱ R2T -Outlet water backup heater thermistor
- ⑲ R3T -Thermistor (heat exchanger, liquid pipe)
- ⑳ R4T -Inlet water thermistor
- ㉑ R5T -Tank thermistor
- ㉒ R8T -Tank thermistor
- ㉓ Flexible pipe