
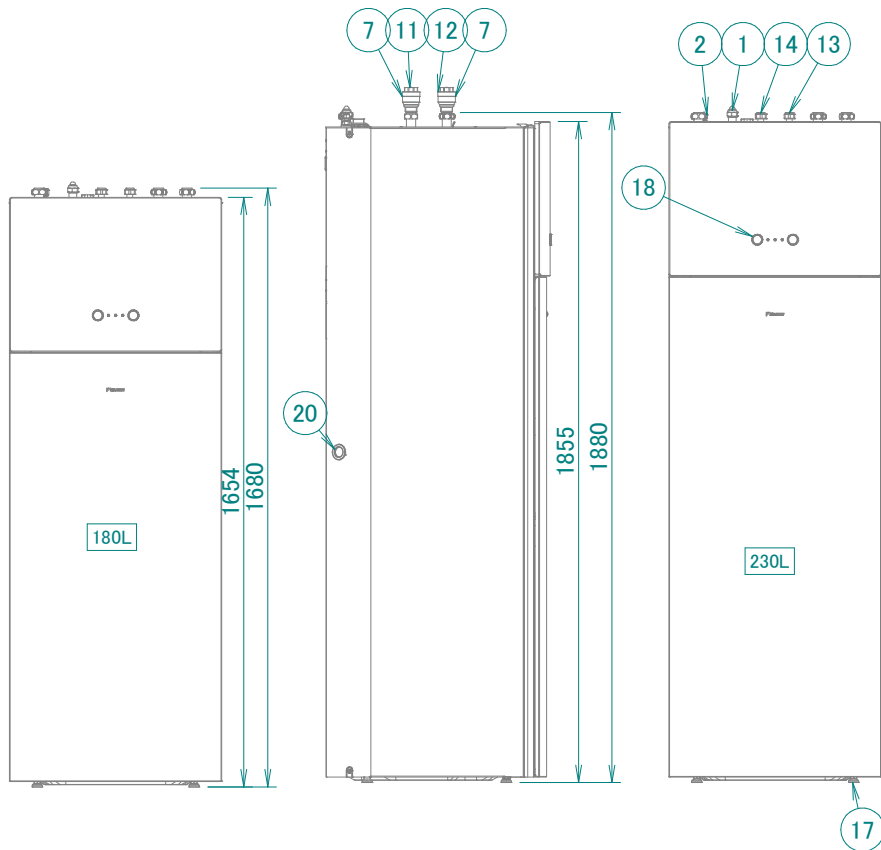



ELVZ-E6V

ELVZ-E9W

The main zone is the temperature zone with the lowest temperature.
The additional zone is the temperature zone with the highest temperature.

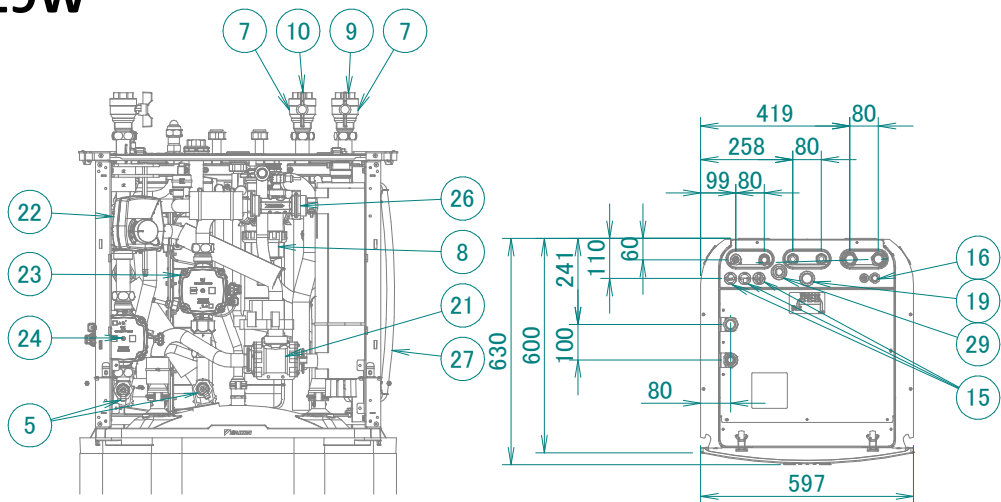

- 1 Gas pipe connection ·Ø15.9 mm· flare
- 2 Liquid pipe connection ·Ø6.35 mm· flare
- 3 Space heating water pressure sensor
- 4 Safety valve
- 5 Drain valve water circuit
- 6 Air purge
- 7 Shut-off valve
- 8 Magnetic filter / dirt separator
- 9 Water IN connection (additional/direct zone) ·1"-BSP· (female)
- 10 Water OUT connection (additional/direct zone) ·1"-BSP· (female)
- 11 Water IN connection (main/mixed zone) ·1"-BSP· (female)
- 12 Water OUT connection (main/mixed zone) ·1"-BSP· (female)
- 13 Domestic hot water: cold water in ·3/4" F BSP·
- 14 Domestic hot water: hot water out ·3/4" F BSP·
- 15 High voltage wiring intake ·Ø24 mm·
- 16 Low voltage wiring intake ·Ø15 mm·
- 17 Levelling feet
- 18 User interface
- 19 Recirculation connection ·G 3/4"· (female)
- 20 Drain outlet (unit + safety valve)
- 21 3-way valve (space heating/domestic hot water)
- 22 3-way valve (mixing valve for the main/mixed zone)
- 23 Pump (additional/direct zone)
- 24 Pump (main/mixed zone)
- 25 Backup heater
- 26 Flow sensor
- 27 Expansion vessel
- 28 Water filter (main/mixed zone)
- 29 Chimney ··

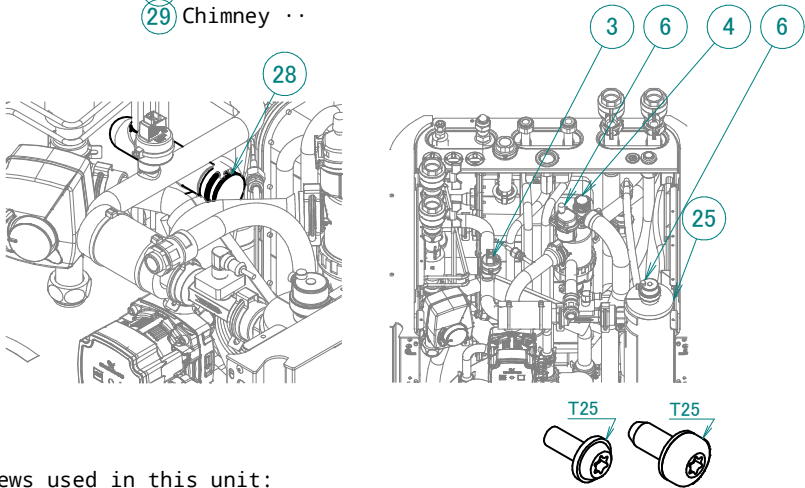

Screws used in this unit:
The typical field installation has to be done according to the applicable legislation.
For examples, refer to the installer reference guide.

3D143284