
## **ELVZ-E6V ELVZ-E9W**

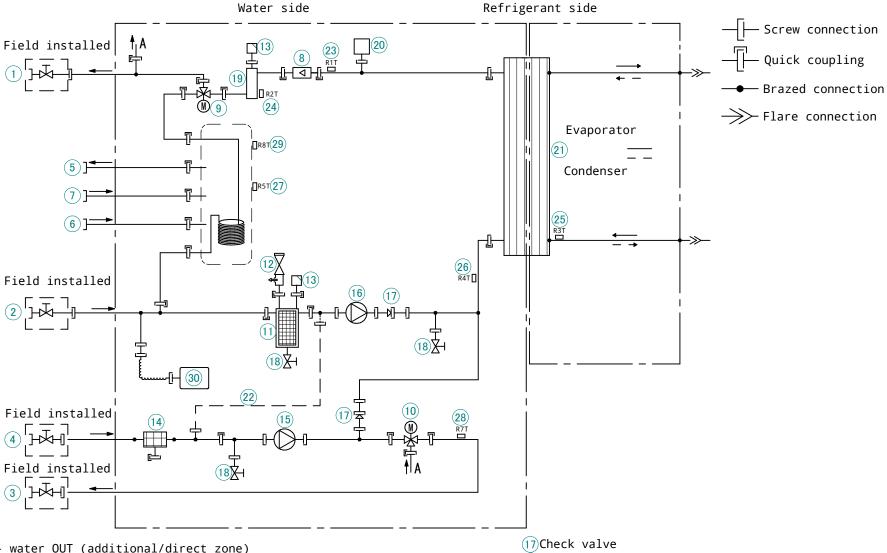

- 1) Space heating water OUT (additional/direct zone)
- 2) Space heating water IN (additional/direct zone)
- 3 Space heating water OUT (main/mixed zone)
- (4) Space heating water IN (main/mixed zone)
- 5 Domestic hot water: hot water out
- 6 Domestic hot water: cold water in 7 Recirculation connection
- (8) Flow sensor
- (9)3-way valve (space heating/domestic hot water)
- (10)3-way valve (mixing valve for the main/mixed zone)
- (11)Magnetic filter / dirt separator
- (12)Safety valve
- (13)Air purge
- (14)Water filter (main/mixed zone)
- (15)Pump (main/mixed zone)
- (16) Pump (additional/direct zone)

- (18)Drain valve
- (19)Backup heater
- 20)Space heating water pressure sensor
- (21)Plate heat exchanger
- (22)Capillary tube
- 23R1T Outlet water heat exchanger thermistor
- 24)R2T Outlet water backup heater thermistor
- 25)R3T Thermistor (heat exchanger, liquid pipe)
- 26 R4T Inlet water thermistor
- (27) R5T Tank thermistor
- (28) R7T Water outlet thermistor (main/mixed zone)
- (29) R8T Tank thermistor
- (30) Expansion vessel