



- A= Minimum water flow rate during normal operation
- B= Minimum water flow rate during cooling operation
- C= Minimum water flow rate during backup heater operation
- D= Minimum water flow rate during defrost operation

Notes

- 1. Selecting a flow outside the operating area can damage the unit or cause the unit to malfunction.
See also the minimum and maximum allowed water flow range in the technical specifications.
- 2. Water quality must be according to EU directive 2020/2184.