


# EMRQ12A

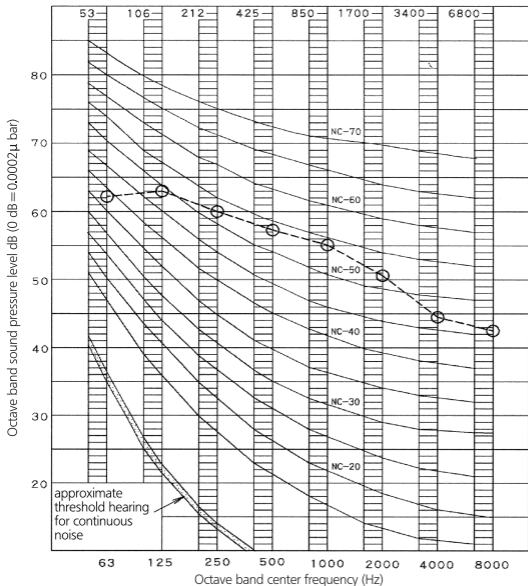

## NOTES

1 Overall (dB)

Scale	50 Hz
A	60
C	67

(B,G,N is already rectified)

2 Measuring place: Anechoic chamber (conversion value)

3 Operating conditions: Power source: Y1 : 380-415V 50Hz

4 The operating sound is measured in anechoic chamber, if it is measured under the actual installation conditions, it is normally over the set value due to environmental noise and sound reflection.

5 Location of microphone

