



NOTE

1. This graph can be used to calculate the pressure drop over the 2-way valve. The pressure drop over the Heat Pump Convector is not included.