




-hk°

) † · -hk°

$$\boxed{ETV*DA*} + \boxed{ETS*DA*}$$

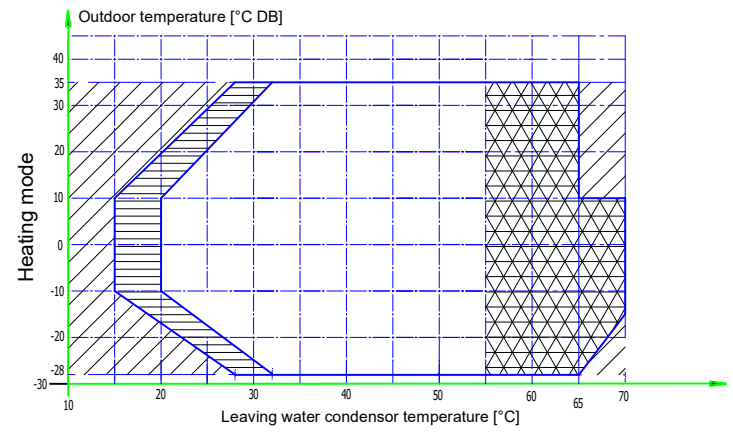

$$\boxed{ETB*DA*}$$

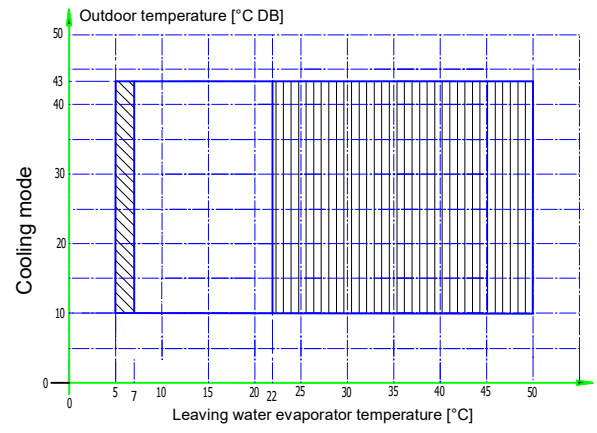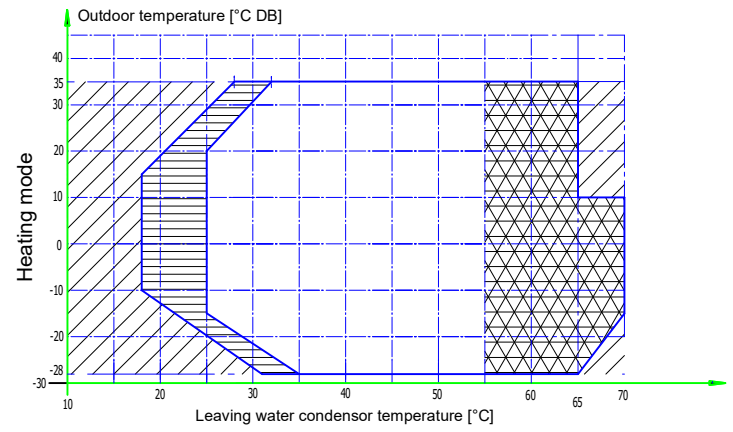

Legend

- Backup heater only operation  
No outdoor unit operation
- Outdoor unit operation if setpoint ≥ -20°
- Pull-down area
- Outdoor unit operation if setpoint > 55 °C and ΔT = -10 °C (ΔT = outlet temperature – inlet temperature)
- In case valve kit -AFVALVE1· is part of the system, then the minimum setpoint is -7 °C.

$$\boxed{ETV*DA*}$$

+

$$\boxed{ETB*DA*}$$

+

$$\boxed{ETS*DA*}$$

Remark

In restricted power supply mode, the outdoor unit, booster heater and backup heater can only operate separately.