
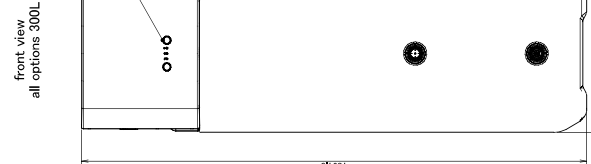
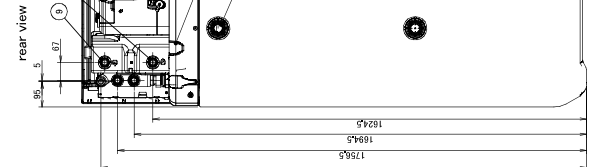
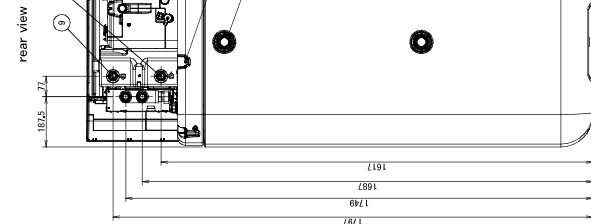
 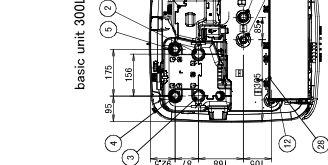

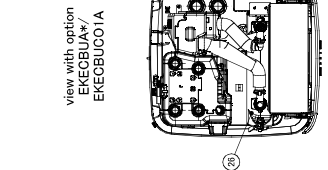
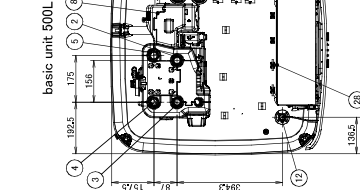
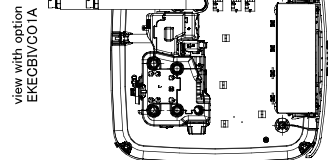
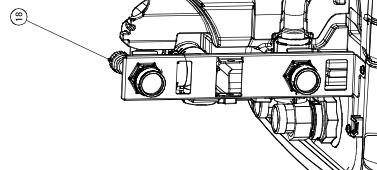


ETSXB16E7

- | | |
|----|--|
| 1 | User interface |
| 2 | Space heating/purge water (N) |
| 3 | Space heating/purge water OUT |
| 4 | Domestic hot water: cold water out |
| 5 | Domestic hot water: hot water out |
| 6 | Domestic hot water: hot water in |
| 7 | Water in connection - hot water |
| 8 | Water out connection - cold water |
| 9 | Outdoor unit connections |
| 10 | Water IN from outdoor unit |
| 11 | Water OUT to outdoor unit |
| 12 | Water IN from indoor unit |
| 13 | Tank thermostat |
| 14 | Tank volume level indication |
| 15 | Mixing 3-way valve |
| 16 | Bypass 3-way valve |
| 17 | Flow sensor |
| 18 | Drain valve / Fill valve |
| 19 | Manual air purge valve |
| 20 | Safety valve |
| 21 | Expansion vessel water pressure sensor |
| 22 | Space heating water pressure sensor |
| 23 | Pump |
| 24 | Drain pan |
| 25 | Drain pan skid |
| 26 | Backup heater switch box |
| 27 | Backup heater |
| 28 | Switch-off valves |
| 29 | Shut-cock (main) |
| 30 | Flow switch |
| 31 | Automatic air purge valve |

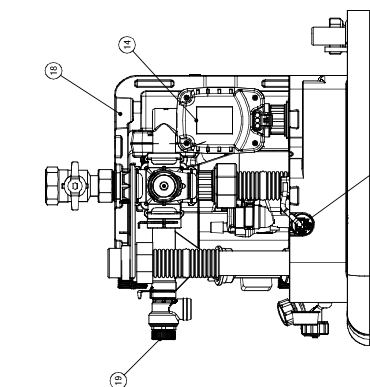

The typical field installation has to be done according to the applicable legislation.
For example, refer to the installer reference guide.