


ETSH16E7
 ETSHB16E7
 ETSX16E7
 ETSXB16E7

ETS*16*EF

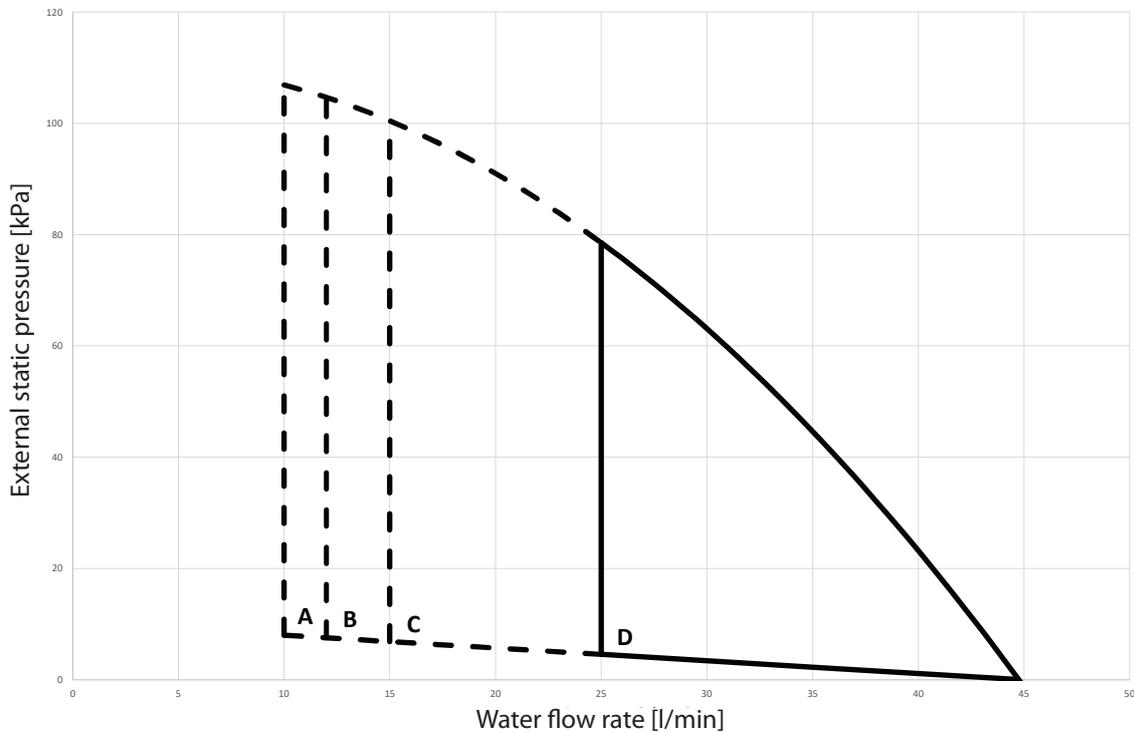


A = Minimum water flow rate during normal operation
 B = Minimum water flow rate during backup heater operation
 C = Minimum water flow rate during cooling operation
 D = Minimum water flow rate during defrost operation

NOTES

1. Selecting a flow outside the operating area can damage the unit or cause the unit to malfunction. See also the minimum and maximum allowed water flow range in the technical specifications.
2. Water quality must be according to EU directive 2020/2184

ETS*16*E*7

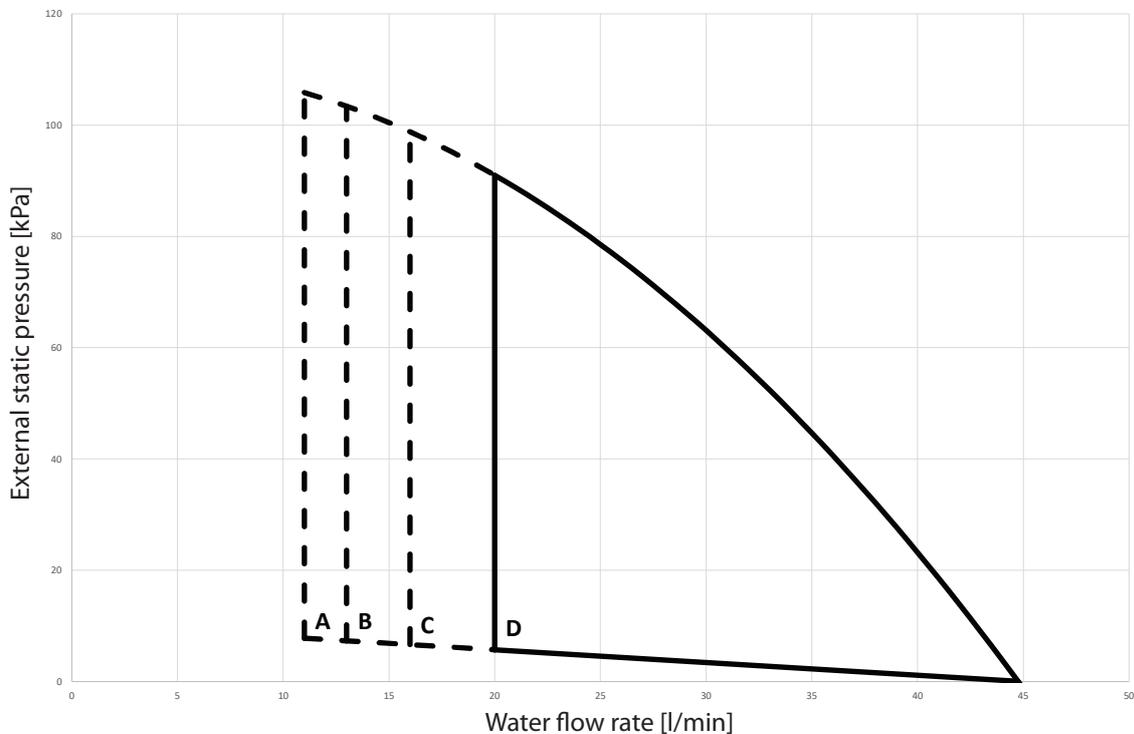

A = Minimum water flow rate during normal operation
 B = Minimum water flow rate during backup heater operation
 C = Minimum water flow rate during cooling operation
 D = Minimum water flow rate during defrost operation

NOTES

1. Selecting a flow outside the operating area can damage the unit or cause the unit to malfunction. See also the minimum and maximum allowed water flow range in the technical specifications.
2. Water quality must be according to EU directive 2020/2184