


## EBS\*11P\*D\*

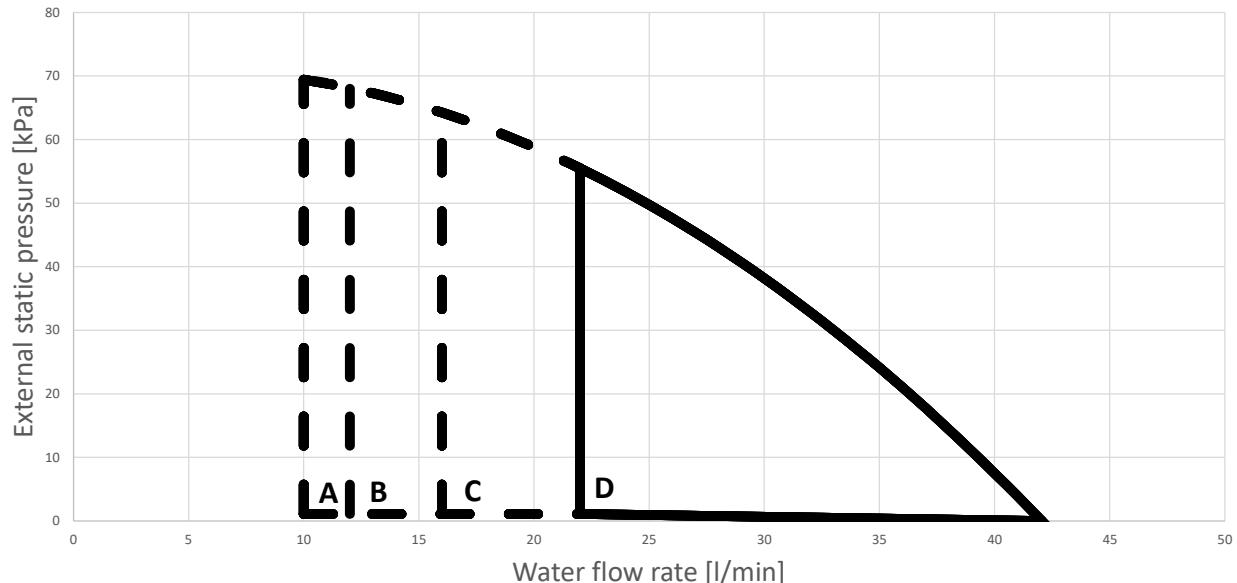


A = Minimum water flow rate during normal operation  
 B = Minimum water flow rate during back up heater operation  
 C = Minimum water flow rate during Cooling operation  
 D= Minimum water flow rate during Defrost operation

## Notes

1. Selectiong a flow outside the operating area can damage the unit or cause the unit to malfunction.  
See also the minimum and maximum allowed water flow range in the technical specifications.
2. Water quality must be according to EU directive 98/83 EC.

## EBS\*16P\*D\*

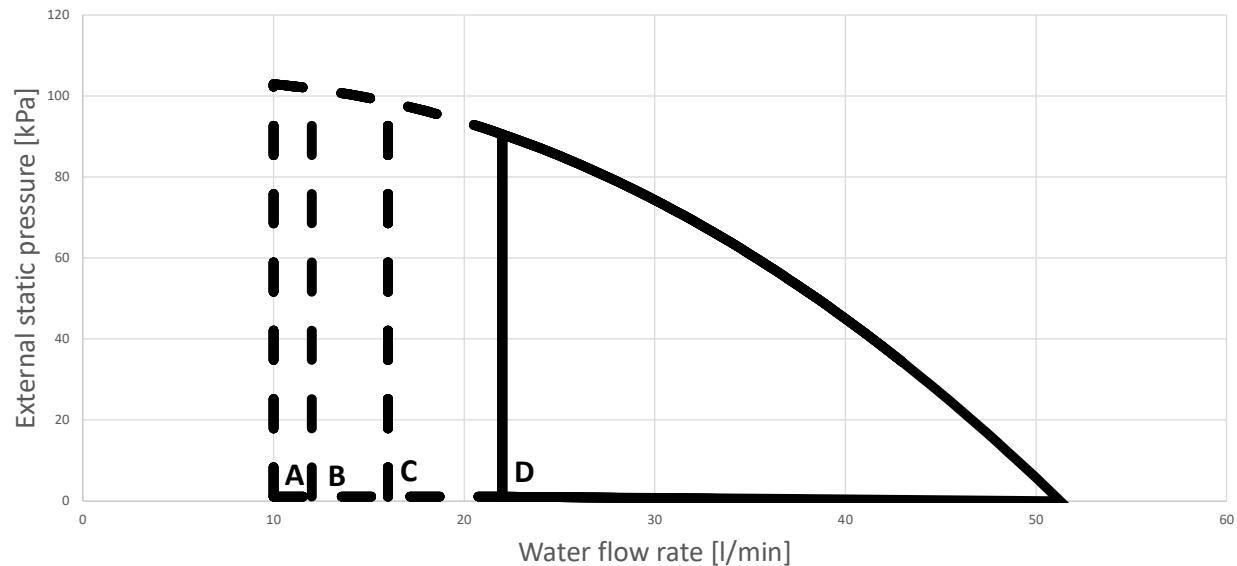

A = Minimum water flow rate during normal operation  
 B = Minimum water flow rate during back up heater operation  
 C = Minimum water flow rate during Cooling operation  
 D= Minimum water flow rate during Defrost operation

## Notes

1. Selectiong a flow outside the operating area can damage the unit or cause the unit to malfunction.  
See also the minimum and maximum allowed water flow range in the technical specifications.
2. Water quality must be according to EU directive 98/83 EC.