


LRYEQ16AY1

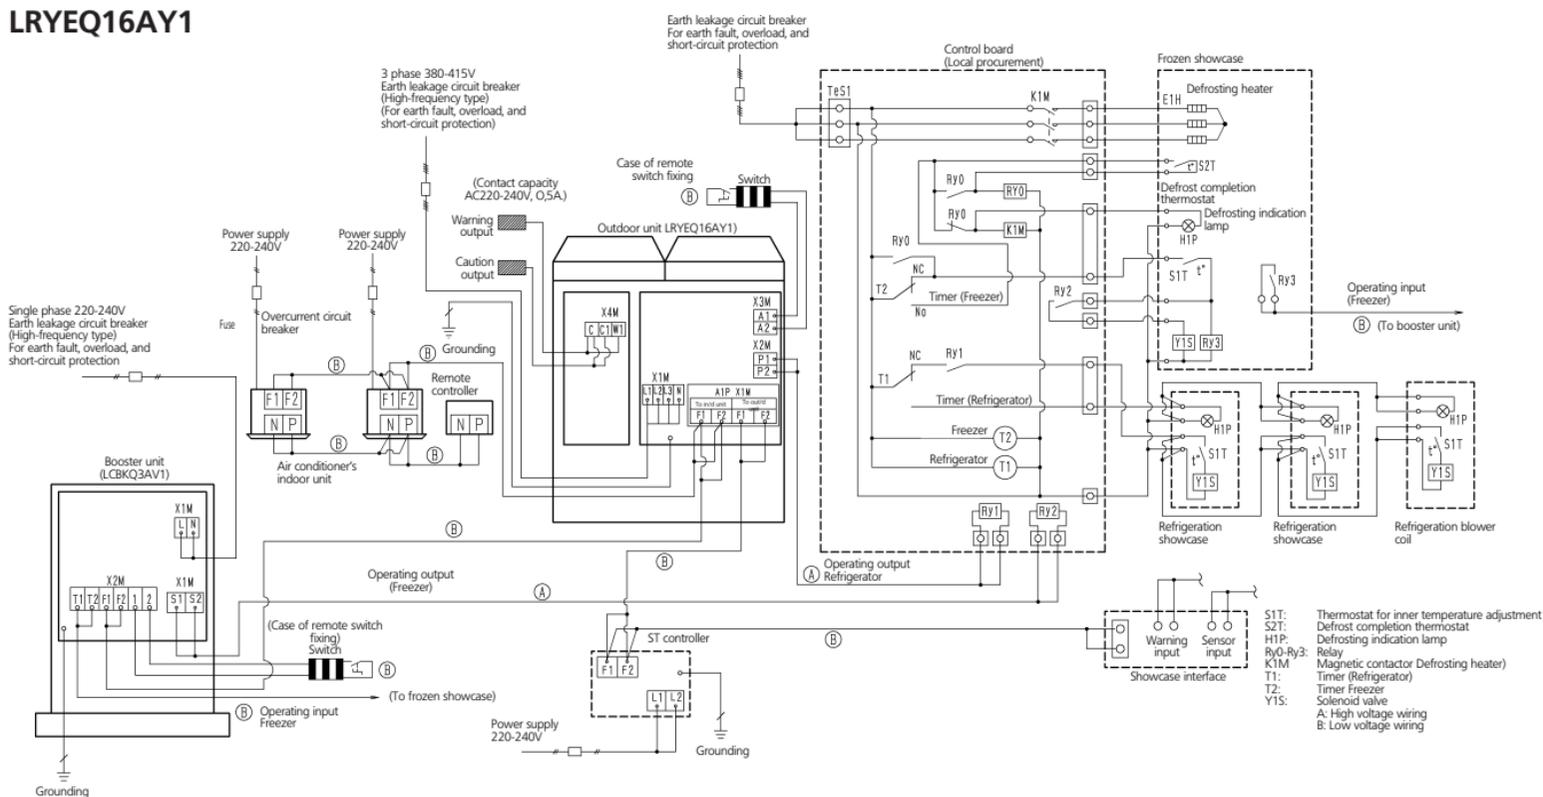

Note

- 1 All wiring, components and materials to be produced on the site must comply with the applicable local and national codes.
- 2 Use copper conductors only.
- 3 As for details, see wiring diagram.
- 4 Install a circuit breaker for safety.
- 5 All field wiring and components must be provided by a licensed electrician.
- 6 Unit shall be grounded in compliance with the applicable local and national codes
- 7 Wiring shown are general points-of-connection guides only and are not intended for or to include all details for a specific installation.
- 8 If there exists the possibility of reversed phase, lose phase, momentary blackout or the power goes on and off while the product is operating, attach a reversed phase protection circuit locally.
- 9 Running the product in reversed phase may break the compressor and other parts.
- 10 In case of used remote switch, use non-voltage contact for microcurrent (not more than 1mA, 12V DC)
- 11 Total capacity for caution, warning: AC 220-240V, 110-120VA.
Capacity for operation output: AC 220-240V, 110-120VA.
- 12 Must install earth leakage circuit breaker