## FCQG100-140F

with auto-cleaning panel


1 Liquid pipe connection

2 Gas pipe connection

3 Drain pipe connection 4 Power supply entry hole

6 Air discharge opening 7 Air suction arille 8 Corner decoration cover 9 Drain hose 10 Knock out hole

5 Transmission wiring entry hole

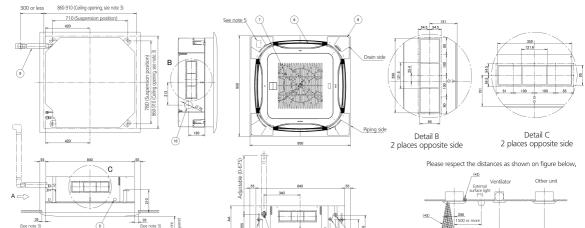

AA	Model
246	FCQG100-140F, FXFQ80-100A
288	FCQHG71-140F, FXFQ125A

	AA.	INIDUEL
	246	FCQG100-140F, FXFQ80-100A
ı	288	FCQHG71-140F, FXFQ125A
ı		

## Notes:

 
- 1. Location of the nameplates:
- Unit body: on the control box cover. Decoration panel: on the panel frame at the piping side under the corner cover.
   When installing an optional accessory, refer to the installation drawings.
- Their installing an optional accessory represents to the installation charmings.
   For fresh air intake kit an inspection part is necessary.

  Make sure the spacing between the ceiling and the cassette is no more than 35mm. MAX ceiling opening: 910mm.
- When the conditions exceed 30°C and RH 80% in the ceiling or fresh air is inducted into the ceiling, an additional insulation is required (polyethylene foam, thickness 10 mm or more).
- 5. In case of using a sensor kit, this position will be a sensor, refer to the drawing of the sensor kit for more detail.

## 200mm or 1500mm or 1500mm or 200mm or 1500mm or more more

View A

Hanging bolt 4 x M8 - M10



Installation direction

4000 or more

Keep the exhaust of decoration panel free.

Does not count for build in light. Space needed to enter with vacuum-cleaner tube.

## Required space

In case a discharge opening is closed with the 'sealing member' option, the distance of 1500mm can be reduced to 500mm on the closed side.