


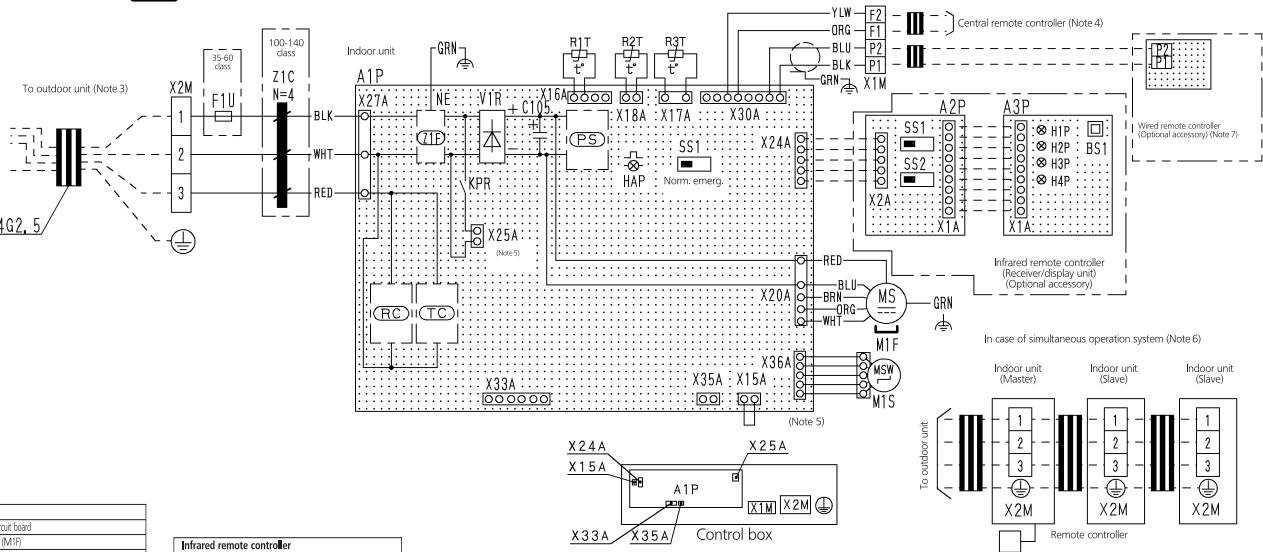

H05VV-U4G2, 5
(Note 9)



Indoor unit	
A1P	Printed circuit board
C105	Capacitor (M1F)
F1U	Fuse (5A, 250V)
HAP	Flashing lamp (service monitor-green)
KPR	Magnetic relay (drain pump)
M1F	Motor (indoor fan)
M1S	Motor (swing blades)
R1T	Thermistor (air)
R2T•R3T	Thermistor (coil)
SS1	Selector switch (emergency)
V1R	Diode bridge
X1M	Terminal block
X2M	Terminal block
Z1F	Noise filter
Z1C	Ferrite core (Noise filter)
PS	Power supply circuit
RC	Signal receiver circuit
TC	Signal transmission circuit

Infrared remote controller (Receiver/display unit)	
A2P	Printed circuit board
A3P	Printed circuit board
BS1	Push button (on/off)
H1P	Pilot lamp (on-red)
H2P	Pilot lamp (on-green)
H3P	Pilot lamp (time-sign-red)
H4P	Pilot lamp (defrost-orange)
SS1	Selector switch (main/sub)
SS2	Selector switch (infrared address set)
Connector for optional parts	
X15A	Connector (flap switch)
X24A	Connector (infrared remote controller)
X25A	Connector (drain pump)
X33A	Connector (Adapter for wiring)
X35A	Connector (Power supply for adapter)

Notes

1. □ □ □ : Terminal block □ □ □ : Connector, ■ ■ ■ : Field wiring

⊕ ⊖ : Short circuit connector

- In case of simultaneous operation indoor unit system, see the indoor unit wiring only.
- For the detail, see wiring diagram attached to outdoor unit.
- In case using central remote controller, connect it to the unit in accordance with the attached installation manual.
- In case of simultaneous operation system, connection quantity of the indoor units varies according to the connection outdoor unit, confirm technical guide and catalog, etc, before connecting.
- In case of main/sub overcharge, see the installation manual attached to remote controller.
- Symbols show as follows: BLK:Black RED:Red BLU:Blue WHT:White YLW:Yellow GRN:Green ORG:Orange BRN:Brown,
- Shows only in case of protected pipes, use H07RN-F in case of no protection.