




## Hybrid unit operation only

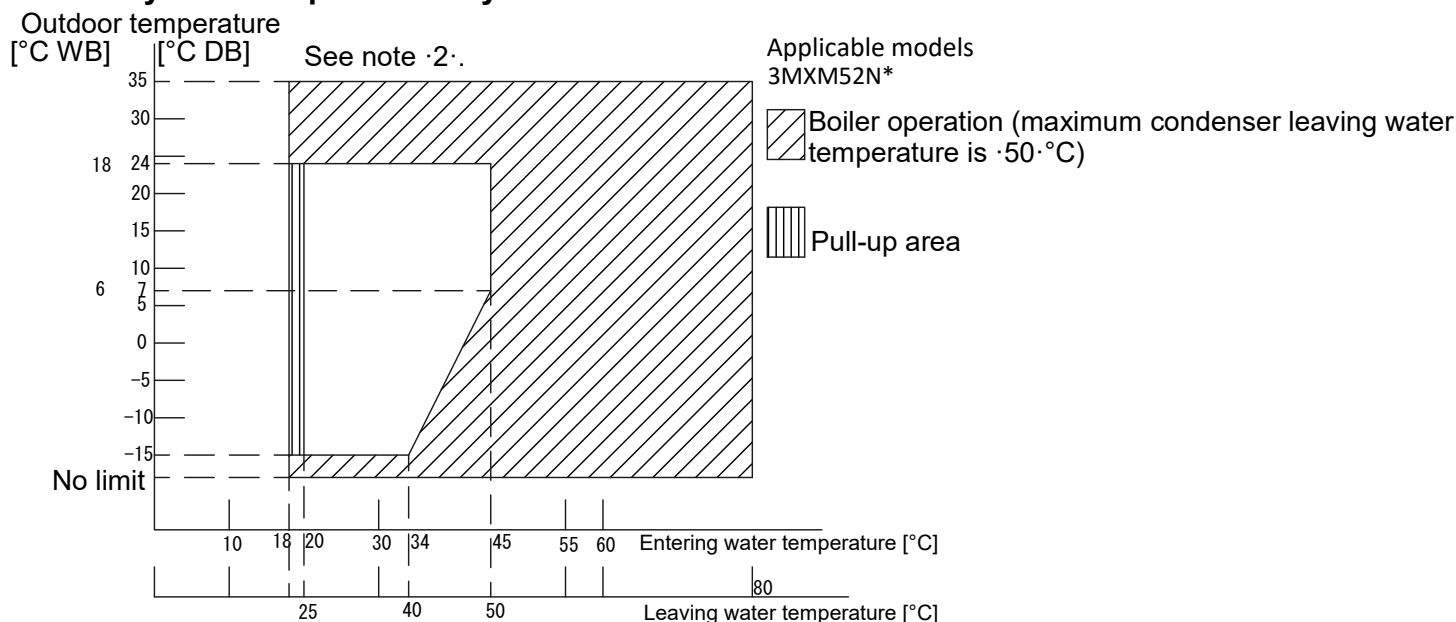

## Hybrid unit operation only

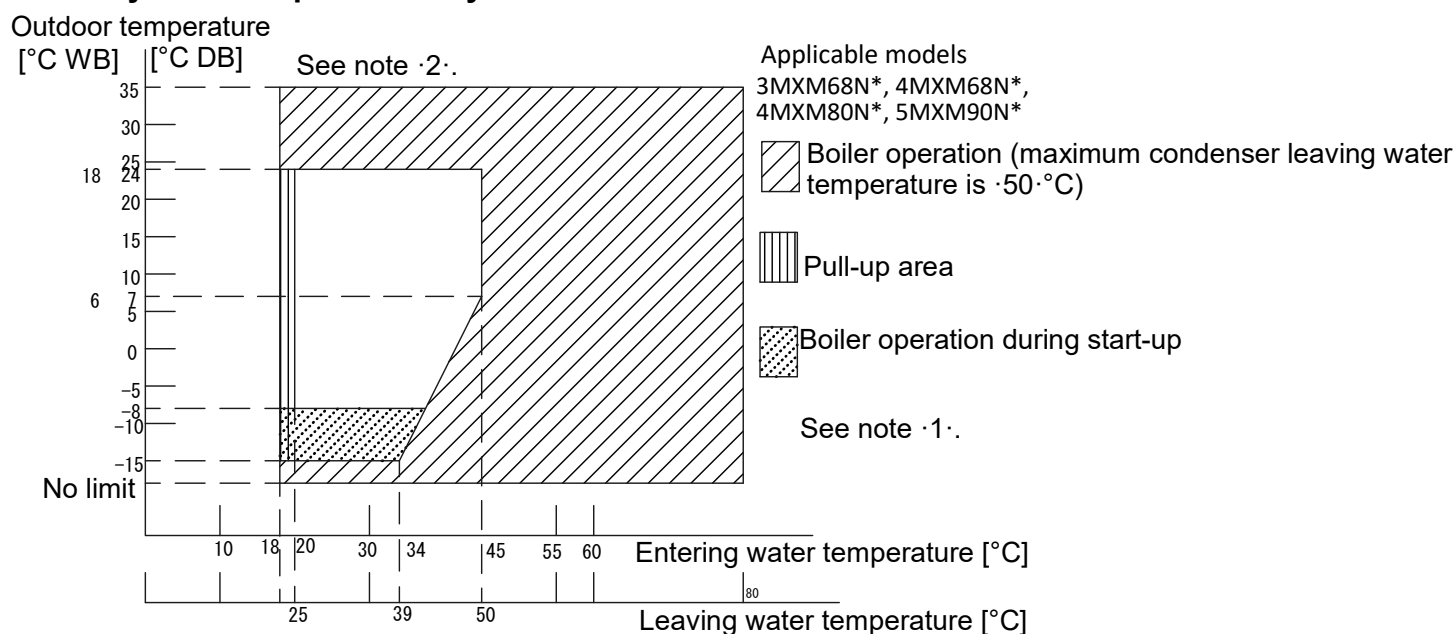

## Domestic hot water heating mode

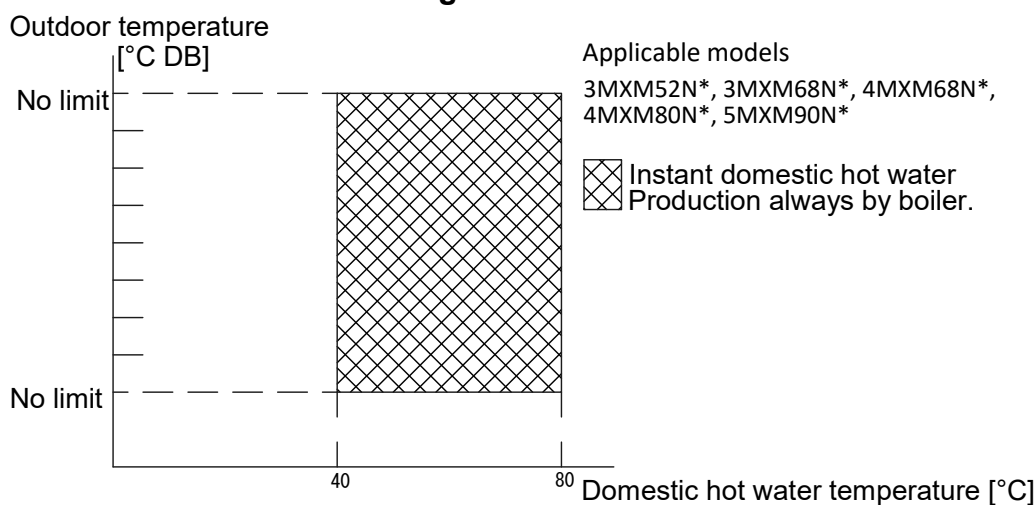

### Notes

1. When the heat pump is operating and the ambient temperature drops below ·-8·°C, then the heat pump will keep operating.
2. The purpose of Hybrid for Multi in combination with Multi Outdoor unit is for Heating only (space heating and DHW (by boiler only)). The target use of the air conditioner indoor unit in such a system is for cooling only.

A combination of Hybrid and Air conditioner indoor unit, both in heating operation, is NOT the main objective of such a system.

Hence, the heating comfort or continuous operation of the air conditioner indoor unit cannot be guaranteed over the complete operation range.