


RXL50J

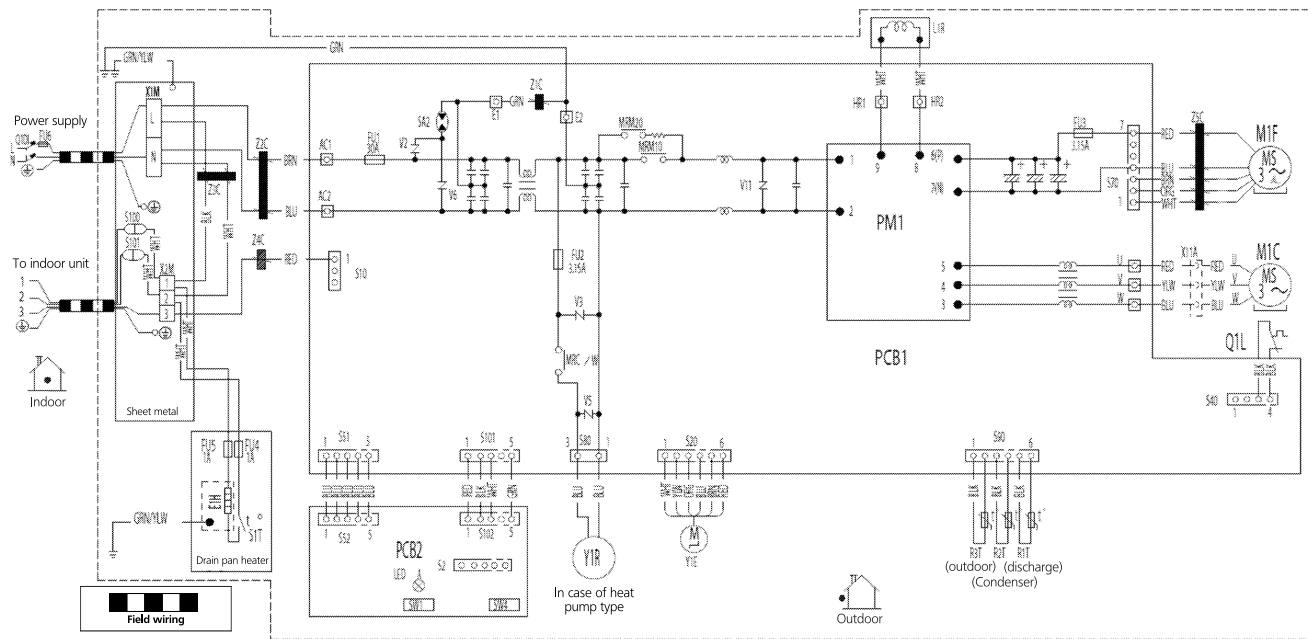

Z1C-Z5C : Ferrite core
 X1M,X2M : Terminal strip
 Y1E : Electronic expansion valve
 V2,V3,V5,V6,V11 : Varistor
 FU1,FU2,FU3 : Fuse
 FU4,FU5 : Fuse
 FU6 : Field fuse
 AC1,AC2,U,V,W : Connector
 X11A,E1,E2,HR1,HR2 : Earth leak detector
 Q1DI : MRM10,MRM20, MRCW : Magnetic relay

R1T-R3T : Thermistor
 S2-S102 : Connector
 LEDA : Pilot lamp
 S1T : Thermostat
 SA2 : Surge arrester
 L : Live
 N : Neutral
 SW1 : Forced operation on/off SW (SW1)
 SW4 : Local setting SW (SW4)
 E1H : Heater

Notes:
 1. Refer to purchasing specification AS303002, unless otherwise specified.

M1C : Compressor motor
 M1F : Fan motor
 L1R : Reactor
 Q1L : Overload protector
 PM1 : Power module
 PCB1,2 : Printed circuit board
 Y1R : Reversing solenoid valve coil
 Sheet metal : Terminal strip fixed plate