

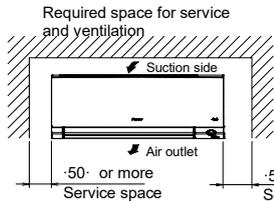







# FTXM20-50A

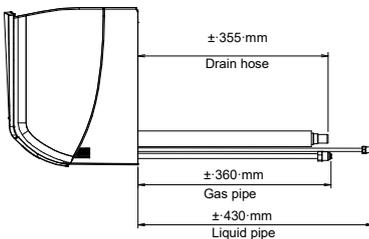


Minimum space for air passage

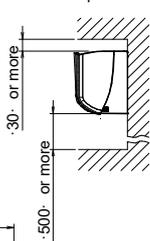


Dimensions of fully opened front panel

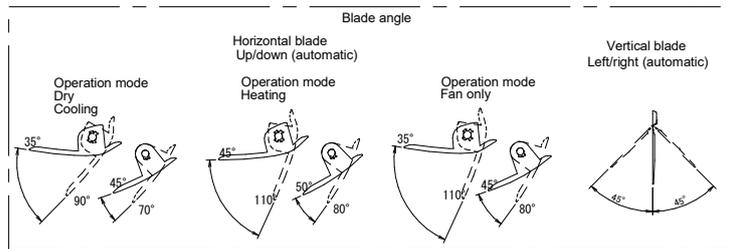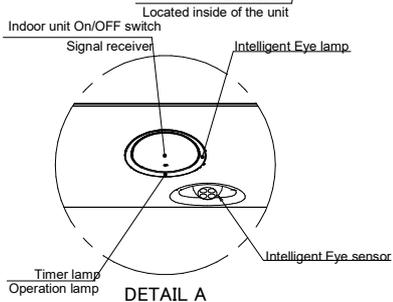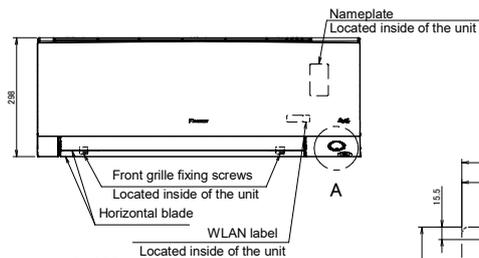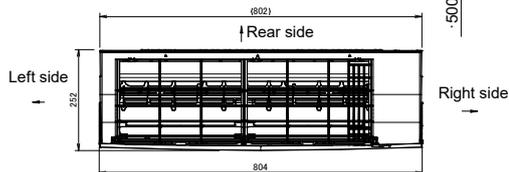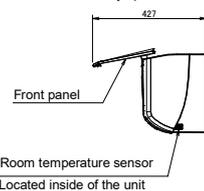

Wireless remote control (ARC466A86) Signal transmitter

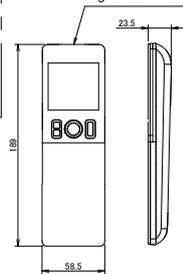

Standard location of holes in the wall

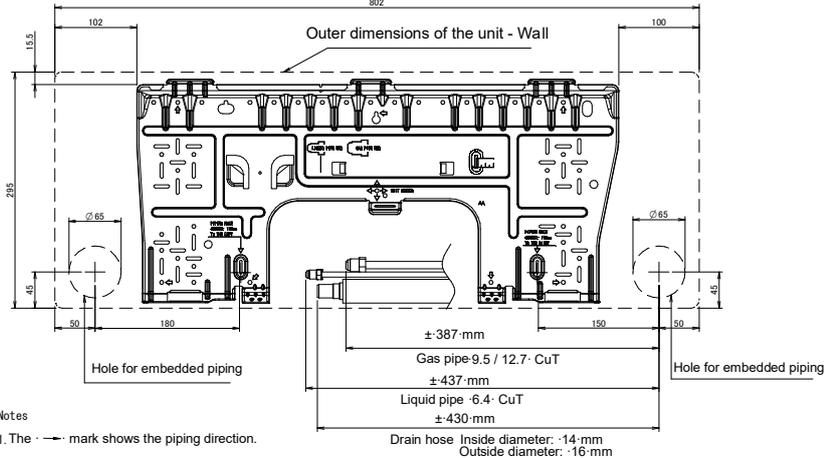

Notes

1. The → mark shows the piping direction.

2D148274A