

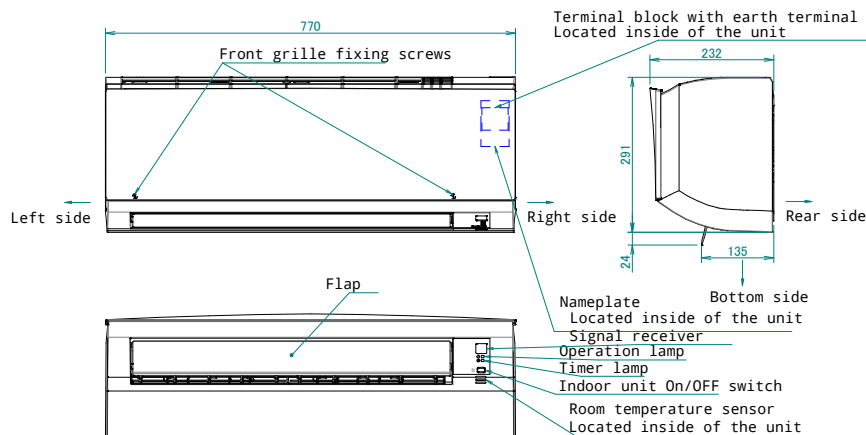


The  mark shows the piping direction.

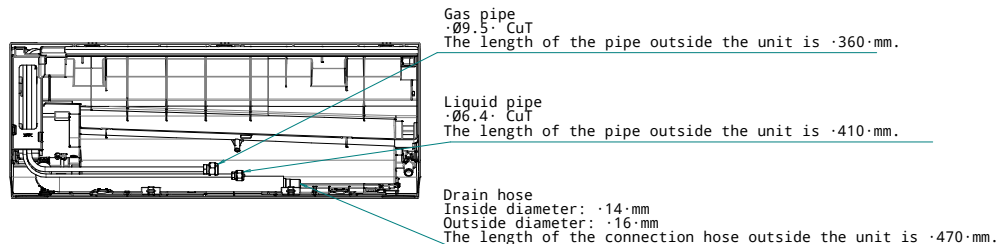

Required space for service and ventilation

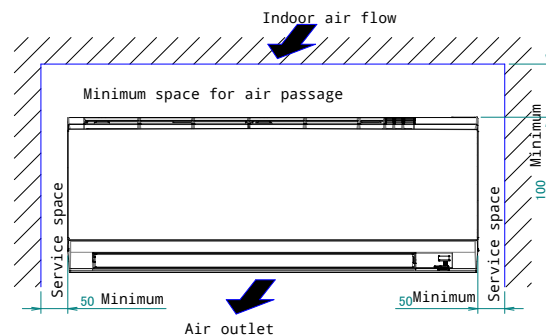

Blade angle

Up/down (automatic)

Cooling



Fan



Heating



Dry



 
Left/right (manual)



Wireless remote control

ARC470A1

Signal transmitter



Standard location of holes in the wall

