

FTXTJ-AB

FTXTJ-AW

CN1, X1A, S16~920, FG	Connector
X1M	Terminal block
F1U	Fuse (T, 3.15A, 250V)
M1F	Motor (indoor fan)
M1~3S	Motor (swing flap)
A1~7P	Printed circuit
R1T	Thermistor
IES	Intelligent eye sensor
BS1	Button switch
H1~3P	Pilot lamp
SR	Signal receiver
H1O	Buzzer
S1RH	Humidity sensor
Z1C~Z4C	Ferrite core
E1	Heat exchanger
K1R	Magnetic relay
V1R	Rectifier
C101, C102	Capacitor
TC	Transmitter
RC	Receiver circuit
⊕	Protective earth
R1V	Varistor
S1T	Temperature sensor

Wire colors

RED : Red

BLU : Blue

BRW : Brown

YLW : Yellow

BLK : Black

GRN : Green

WHT : White

GRN/YLW : Green/Yellow

Unmarked housings are all white

Field wiring :

CAUTION

When the main power is turned OFF and then back ON again, operation will resume automatically.

Wiring diagram

