



Setting for shipment

When the electric box is attached to the other side

The center of gravity shifts with the location of the electric box