

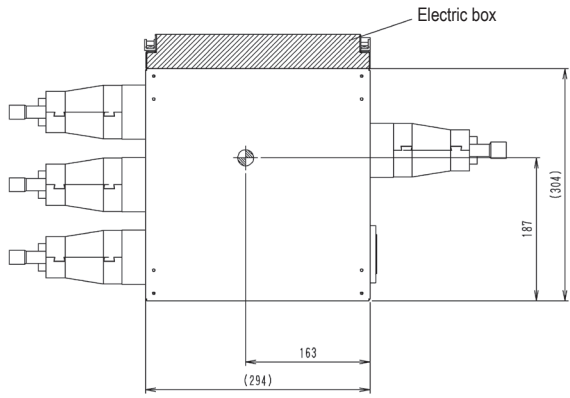


Setting for shipment

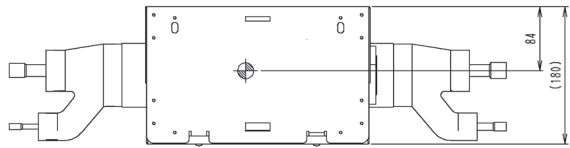

When the electric box is attached to the other side

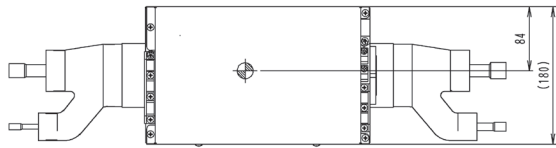

The center of gravity shifts with the location of the electric box