



IN CASE OF BOTTOM SUCTION

- NOTES : IN CASE OF BACK SUCTION
1. IN CASE OF BACK SUCTION, MOUNT CHAMBER COVER TO BOTTOM SIDE OF THE UNIT. IN CASE OF BOTTOM SUCTION, MOUNT CHAMBER COVER TO BACK SIDE OF THE UNIT.
 2. LOCATION OF UNIT NAME PLATE: CONTROL BOX COVER.
 3. MOUNT THE AIR FILTER AT THE SUCTION SIDE. (USE AN AIR FILTER WHOSE DUST COLLECTING EFFICIENCY IS AT LEAST 50% IN A GRAVIMETRIC TECHNIQUE). IT CAN NOT BE EQUIPPED WITH AIR FILTER (ACCESSORY) WHEN CONNECTING DUCT TO SUCTION SIDE

ITEM	NAME	DESCRIPTION
1	LIQUID PIPE CONNECTION	Dia.9.5 FLARE CONNECTION
2	GAS PIPE CONNECTION	Dia.15.9 FLARE CONNECTION
3	DRAIN PIPE CONNECTION	VP20 (OD Dia.26, ID Dia.20)
4	DRAIN HOSE (ACCESSORY)	ID Dia.25 (OUTLET)
5	CONTROL BOX	.
6	TRANSMISSION WIRING CONNECTION	.
7	POWER SUPPLY CONNECTION	.
8	SUSPENSION BRACKET	.
9	INSPECTION COVER	.
10	SOCKET FOR DRAIN	.
11	AIR FILTER (ACCESSORY)	.