


FXHQ100A


Air velocity distribution (cooling)

Air flow direction: horizontal

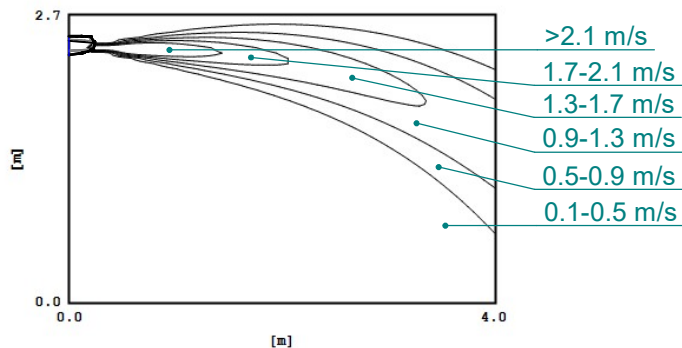


Air temperature distribution (cooling)

Air flow direction: horizontal

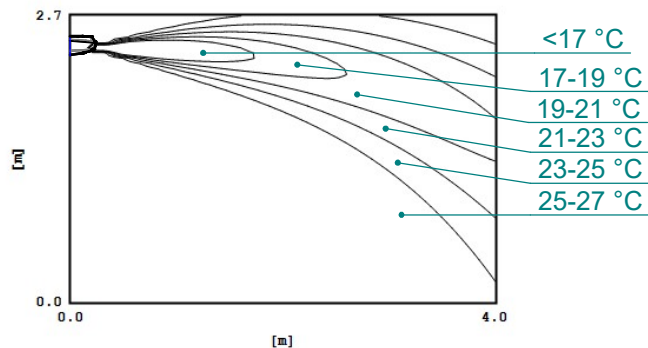

Air velocity distribution (heating)

Air flow direction: vertical

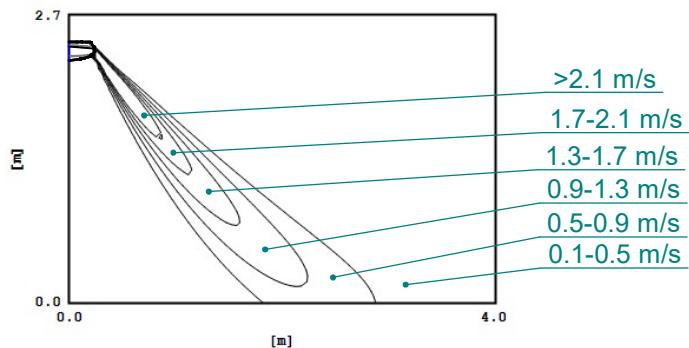

Air temperature distribution (heating)

Air flow direction: vertical

