
## Air flow auto adjustment

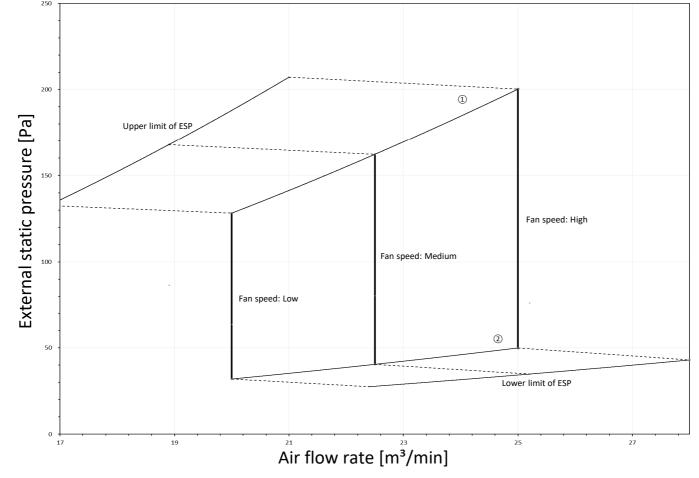

- 1 Upper limit of ESP by air flow auto adjustment
- 2 Lower limit of ESP by air flow auto adjustment