


# FXMQ250MB

50Hz 220-240V

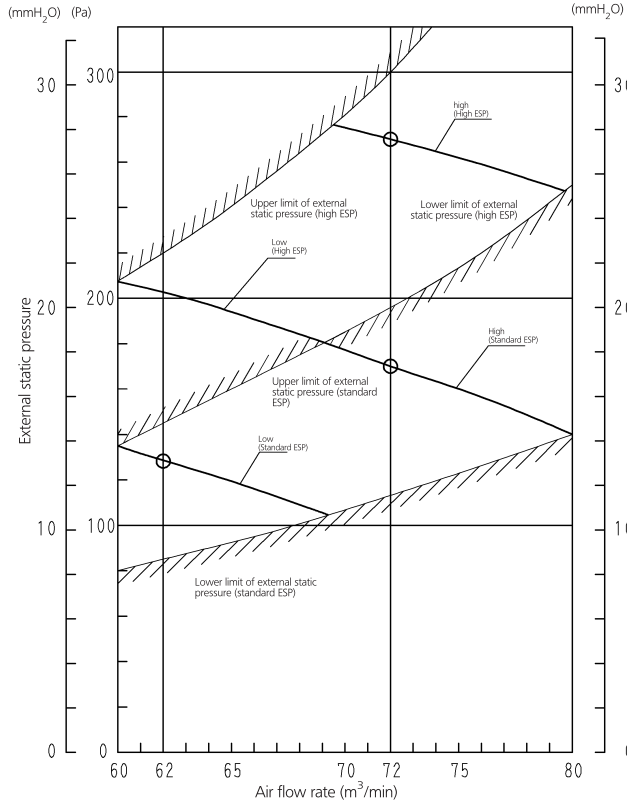

Notes:

1. Remote controller can be used to switch between 'HIGH' and 'LOW'.
2. The air flow is set to 'STANDARD' before leaving the factory. It is possible to switch between 'STANDARD ESP' and 'HIGH ESP' by remote controller.