


# FXNQ20-25A

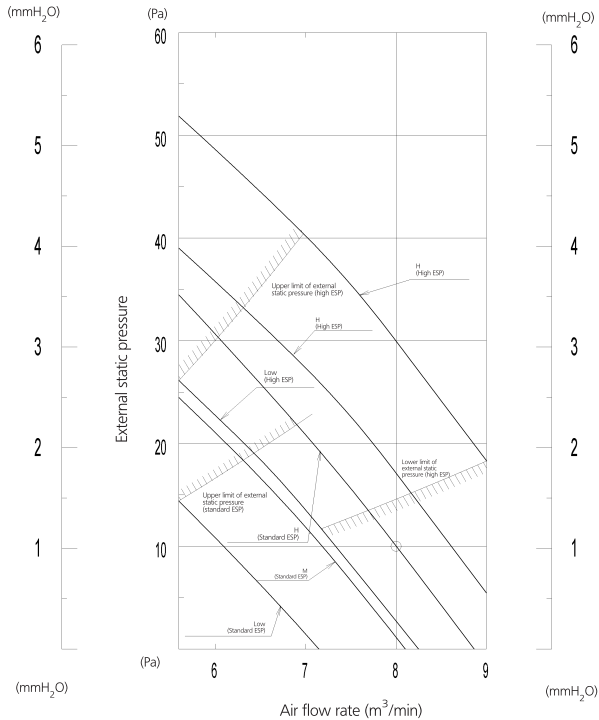

**Notes:**

1. Remote controller can be used to switch between 'HIGH' and 'LOW'.
2. The air flow is set to 'STANDARD' before leaving the factory. It is possible to switch between 'STANDARD ESP' and 'HIGH ESP' by remote controller.